CHANDLER & PRICE CRAFTSMAN PRESS

with

C. & P. Rice Automatic Feeder 10x15 and 12x18



Component Parts List

When ordering parts:

Always give the serial number of the unit which is found stamped on the bed of the press in the upper left-hand corner. RD1972

Always give the size of press, part number, and the name and description of the part wanted.


Always state the definite mode of transportation, whether Air Mail—Express—Parcel Post—Freight.


When ordering by wire, use Code words listed in the left-hand column, specifying quantity of each part wanted. The Code word will indicate to us the number and name of the part.

Parts are shipped f.o.b. factory and any prices listed are subject to change without notice.

In practically all cases parts ordered will be shipped from the factory the same day the order is received.

Too much information is always better than not enough. A close observance of the above suggestions will eliminate the possibility of error and will expedite service.

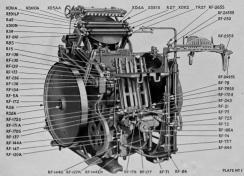

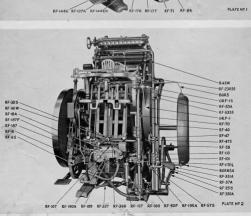


COMPONENT PARTS LIST


| Part Number | Part Shown on Plate No. | Code | Name and Description | Part Number | Part Shown on Plate No. | Code | Name and Description |
|----------------|-------------------------------|---------|---|-----------------|-------------------------------|-------|---|
| BGR2 | 3 | OBABII | Belt Guard Rear Support | CF19P | Not Shown | | Brayer Fountain Vibrating Roller Cam |
| BGR2N | Not Shown | OBACE | Belt Guard Rear Support Screw Nut | | | ODICA | Pin |
| BGR2S | 3 | OBADO | Belt Guard Rear Support Screw | CF19S | Not Shown | OBIDY | Brayer Fountain Vibrating Roller Cam |
| BGR2W | Not Shown | OBAFA | Belt Guard Rear Support Screw Washer | | | | Ball Screw |
| BGR4 | Not Shown | OBAGR | Belt Guard Support Bracket | CF20A | Not Shown | OBIFE | Brayer Fountain Brayer Arm Shaft |
| BGRS | 2 | OBAHA | Belt Guard Brace Rod | CF20EA | 10 | OBIGL | Brayer Fountain Spring |
| BGR5LN | Not Shown | OBAJI | Belt Guard Brace Rod Nut | CF20EW | Not Shown | OBIHA | Brayer Fountain Spring Washer |
| BGR5N | Not Shown | OBAKS | Belt Guard Brace Rod Wing Nut | CF20K | Not Shown | OBIJA | Brayer Fountain Brayer Arm Key |
| BGRSW | Not Shown | OBALM | Belt Guard Brace Rod Washer | CF20P | Not Shown | OBIKY | Brayer Fountain Brayer Arm Taper Pin |
| BGR6A BGR6N | Not Shown Not Shown | OBANE | Belt Guard Lower Support Belt Guard Lower Support Nut | CF21AA CF21R | 10 | OBILD | Brayer Fountain Brayer Arm, Left |
| BGRESA | Not snown | OBARY | Belt Guard Lower Support Nut Belt Guard Lower Support Stud | CF21RC | Not Shown | OBINT | Brayer Fountain Spring Rod Brayer Fountain Spring Rod Cotter |
| BOR68N | Not Shown | OBART | Belt Guard Lower Support Stud Nut | CF21RS | 10 | OBIPU | Brayer Fountain Spring Rod Cotter Brayer Fountain Spring Rod Stud |
| BGR6W | Not Shown | OBASM | Belt Guard Lower Support Washer | CF21RSC | Not Shown | OBIOE | Braver Fountain Spring Rod Stud Cotte |
| BGR7 | Not allowin | OBATH | Belt Guide | CF21RSW | Not Shown | OBIRM | Brayer Fountain Spring Rod Stud Cotte |
| BGR7N | 3 | OBAVI | Belt Guide Nut | CF21SS | Not Shown | OBIST | Brayer Fountain Brayer Arm Set Screw |
| BGR7W | 3 | OBAWL | Belt Guide Nut Washer | CF22AA | 10 | OBITH | Brayer Fountain Brayer Arm, Right |
| BGR10 | 3 | OBAXE | Belt Guard | CF22R | 10 | OBIVE | Brayer Fountain Brayer Arm Safety |
| BL1 | 6 | OBAZO - | Brake Lever | | | | Handle |
| BLIE | 6 | OBBAM | Brake Lever Spring | CF22348 | 10 | OBIWU | Brayer Fountain Swinging Arm Spring |
| BL1P | 6 | OBBET | Brake Lever Pin | | | | Rod Stud |
| BLIPC | Not Shown | OBBIS | Brake Lever Cotter | CF23 | 10 | OBIXL | Braver Fountain Roll Large Gear |
| BL2 | 6 | OBBOF | Brake Lever Bracket | CF23P | Not Shown | OBIZO | Brayer Fountain Roll Large Gear Pin |
| BL2S | Not Shown | OBBUV | Brake Lever Bracket Screw | CF24 | 10 | OBJAW | Brayer Fountain Ratchet Lever |
| BL28N | Not Shown | OBCAT | Brake Lever Bracket Screw Nut | CF24PC | Not Shown | OBJEF | Brayer Fountain Ratchet Lever Stud |
| BL2SS | 6 . | OBCES | Brake Lever Bracket Set Screw | | | | Cotter |
| BL2SW | Not Shown | OBCID | Brake Lever Bracket Screw Washer | CF25 | Not Shown | OBJIG | Brayer Fountain Ratchet Pawl Spring |
| BL288N | Not Shown | овсов | Brake Lever Bracket Set Screw Lock Nut | | | | Latch |
| BL3 | 3 | OBCUT | *Brake Shoe | CF27A | Not Shown | овјов | Brayer Fountain Composition Roller |
| BL3S | 3 | OBDAM | Brake Shoe Screw | | | | Gear |
| BL38N | Not Shown | OBDEF | Brake Shoe Screw Nut | CF27C | Not Shown | OBJUS | Brayer Fountain Composition Roller |
| BL4 | Not Shown | OBDIN | Brake Shoe Lining Rivet | | | | Gear Cotter |
| BLS | 6 | OBDOP | Brake Shoe Lining | CF28 | Not Shown | OBKAM | Brayer Fountain Composition Roller |
| CF1A | 10 | OBDUB | Brayer Fountain Side Frame, Left | | | | Saddle, Left |
| CF1N | Not Shown | OBEBI | Brayer Fountain Front Rod Nut | CF28C | Not Shown | OBKER | Brayer Fountain Composition Roller |
| CF1R | Not Shown | OBECA | Brayer Fountain Front Rod | | | | Saddl: Cotter |
| CF134 | Not Shown | OBEDU | Brayer Fountain Side Frame Swivel Plug. Left | CF28E | Not Shown | OBKIS | Brayer Fountain Composition Roller Saddle Spring |
| CF134LS | Not Shown | | Brayer Fountain Side Frame Swivel Plug Lock Screw | CF28S | Not Shown | | Brayer Fountain Composition Roller Saddle Screw |
| CF134S | Not Shown | OBEGO | Brayer Fountain Side Frame Swivel Plug Adjusting Screw | CF2835 | Not Shown | OBKUP | Brayer Fountain Composition Roller Saddle, Right |
| CF2A | 10 | OBEHI | Brayer Fountain Side Frame, Right | CF29 | Not Shown | OBLAS | Braver Fountain Composition Roller |
| CF236 | 10 | OBEIU | Braver Fountain Side Frame Swivel Pluz. | | | | Stock |
| | 10 | | Right | CF29 Cast | Not Shown | OBLEW | Brayer Fountain Composition Roller |
| CF256N | 10 | OBEKA | Brayer Fountain Side Frame Swivel Plug Nut | CF30 | Not Shown | OBLIX | Stock Cast Braver Fountain Bracket Rod, Short |
| CESA | 10 | OBBLI | Brayer Fountain Front Bar | CF30N | Not Shown | OBLIA | Brayer Fountain Bracket Rod, Snort Brayer Fountain Bracket Rod Nut |
| CF3S | Not Shown | OBEME | Brayer Fountain Front Bar Screw | CF31 | 10 | OBLUV | Brayer Fountain Bracket Rod Nut |
| CF4 | 10 | OBENS | Brayer Fountain Rear Bar | CF34A | 10 | OBMAG | Brayer Fountain Index Plate |
| CF48 | Not Shown | OBEPH | Brayer Fountain Rear Bar Screw | CF34N | 10 | OBMED | Braver Fountain Index Plate Stud Wing |
| CFS | 10 | OBEQU | Brayer Fountain Side Frame Cap, Left | CESTE | 10 | ODMED | Not |
| CF5C - | Not Shown | OBERT | Brayer Fountain Side Frame Cap Oil Cup | CF348 | Not Showa | OBMIN | Brayer Fountain Index Plate Stud |
| CF5N | Not Shown | OBESH | Brayer Fountain Side Frame Cap Screw | CF34SW | Not Shown | | Brayer Fountain Index Plate Stud |
| | | | Wing Nut | | | | Washer |
| CF5NP | Not Shown | OBETS | Brayer Fountain Side Frame Cap Screw Wing Nut Pin | CF35 | 10 | OBMUL | Brayer Fountain Throw-Off Rod Stop Collar |
| CF5P | Not Shown | OBEVA | Brayer Fountain Side Frame Cap Pin | CF35P | Not Shown | ORNAW | Brayer Fountain Throw-Off Rod Stop |
| CF5S | Not Shown | OBEWT | Brayer Fountain Side Frame Cap Screw | | | | Collar Pin |
| CF6 | 10 | OBEXU | Brayer Fountain Side Frame Cap. Right | CF36A | 10 | OBNEG | Brayer Fountain Throw-Off Plate |
| CF7 | 10 | OBEYS | Brayer Fountain Bracket, Left | CF36E | Not Shown | OBNIL | Brayer Fountain Throw-Off Plate Spring |
| CF7P | 3 | OBEZU | Brayer Fountain Bracket Retaining Pin | CF36P | Not Shown | OBNOS | Braver Fountain Throw-Off Plate Rolle |
| CF7S | Not Shown | OBFAT | Brayer Fountain Bracket Screw | | | | Pin |
| CF788 | Not Shown | OBFEL. | Brayer Fountain Bracket Set Screw | CF37 | 10 | OBNUT | Brayer Fountain Throw-Off Plate Rolle |
| CF7W | Not Shown | OBFIR | Brayer Fountain Bracket Set Screw | CF38 | 10 | OBOBS | Brayer Fountain Ratchet Lever Roller |
| | | | Washer | CF38S | Not Shown | OBOCI | Brayer Fountain Ratchet Lever Roller Stud |
| CF8 | 10 | OBFOG | Brayer Fountain Bracket, Right | CF43C | Not Shown | OBODY | Brayer Fountain Throw-Off Rod Cotter |
| CF9 | 10 | OBFUB | Brayer Fountain Cover | CF43E | 10 | OBOFA | Brayer Fountain Throw-Off Rod Spring |
| CF9L | Not Shown | OBGAK | Brayer Fountain Cover Latch | CF45 | 10 | OBOGI | Brayer Fountain Safety Stop Rod |
| CF9R | Not Shown | OBGED | Brayer Fountain Cover Rivet | CF45E | Not Shown | | Brayer Fountain Safety Stop Rod Pin |
| CF10 | Not Shown | OBGIT | Brayer Fountain Blade | CF45P | Not Shown | | Brayer Fountain Safety Stop Rod Guide |
| CF10S | Not Shown | OBGOB | Brayer Fountain Blade Screw | | | | Pin |
| CF13 | 10 | OBGUS | Brayer Fountain Roll | CF46 | 10 | OBOKA | Brayer Fountain Safety Stop Rod Handle |
| CF15 | Not Shown | OBHAC | Brayer Fountain Roll Shaft | CF46P | Not Shown | | Brayer Fountain Safety Stop Rod Handle |
| CF16 | 10 | OBHEN | Brayer Fountain Vibrating Roller | | | | Pin |
| CF18 | Not Shown | OBHIL | Brayer Fountain Vibrating Roller Shaft | CF49AA | 10 | OBOME | Brayer Fountain Roll Handwheel |
| CF19 | Not Shown | овнот | Brayer Fountain Vibrating Roller Cam | CF49P | Not Shown | OBONS | Brayer Fountain Roll Handwheel Pin |
| CF19BB | Not Shown | OBHUM | Brayer Fountain Vibrating Roller Cam | CFSS | 10 | OBOPL | Brayer Fountain Side Arm Washer |
| | | | Ball | CF55C | Not Shown | OBOQU | Brayer Fountain Side Arm Washer Cotte |
| CF19N | Not Shown | OBIBS | Brayer Fountain Vibrating Roller Cam | CFSSN | Not Shown | OBORN | Brayer Fountain Side Arm Washer Stud |
| | | | Ball Screw Lock Nut | | | | Nut |


^{*}Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts IMPORTANT—Be sure to mention size of press for which parts are being ordered.


| Part | Part Shown | | | Part | Part Shown | | |
|---------------------|-------------|-------|---|-------------------|----------------|--------|--|
| Number | Plate No. | Code | Name and Description | Part Number | Plate No. | Code | Name and Description |
| FSSP | Not Shown | OBOSK | Braver Fountain Side Arm Washer Dowel | R12BSS | Not Shown | OCAHR | Crank Shaft Set Screw |
| F55P F558 | Not Shown | OBOTL | Brayer Fountain Side Arm Washer Stud | R12C | Not Shown | OCAII | Crank Shaft Oil Cup |
| FBST | 10 | OBOVE | Brayer Fountain Blade Adjusting Screw | RIST | 5 | OCAKO | Crank Shaft Oil Tube |
| 851 | 10 | OBOWT | Brayer Fountain Ratchet Wheel | RIZTC | Not Shown | OCALM | Crank Shaft Single Oil Tube Clip |
| 89K | Not Shown | OBOXI | Brayer Fountain Ratchet Wheel Key | RIZTCP | Not Shown | OCALT | Crank Shaft Single Oil Tube Clip Riv |
| 90 | 10 | OBOYS | Brayer Fountain Ratchet Pawl | R13 | 5 | OCAMI | Pinion |
| 908 | Not Shown | OBOZI | Brayer Fountain Ratchet Pawl Screw | R13K | 5 | OCANO | Pinion Key |
| 905 1904S | Not Shown | OBPAN | Brayer Fountain Driver Stud | R14&33 | 5 | OCAPU | *Large Gear Cam Wheel |
| 90395 9039SC | Not Shown | OBPRS | Brayer Fountain Driver Stud Cotter | R1414 | Not Shown | OCARS | Large Gear Cam Wheel Steel Segmen |
| 9014SN | Not Shown | OBPIL | Brayer Fountain Driver Stud Nut | R1434S | Not Shown | OCASM | Large Gear Cam Wheel Steel Segmen |
| 790395IN 79016SW | Not Shown | OBPOT | Brayer Fountain Driver Screw Washer | | | | Screw |
| 792 | 10 | ORPUK | Braver Fountain Cover Knob | R15 | 4 | OCATI | *Rocker Lock Roller |
| 199 | Not Shown | OBOAW | Brayer Fountain Name Plate | RISC | 4 | OCAVA | Rocker Lock Roller Oil Cup |
| 99R | Not Shown | OBQER | Braver Fountain Name Plate Rivet | R158 | 4 | OCAWK | Rocker Lock Roller Stud |
| R24P | 10 | OBOIK | Brayer Fountain Ratchet Lever Stud | R15SN | 4 | OCAXY | Rocker Lock Roller Nut |
| FR26 | 10 | OBOON | Braver Fountain Ratchet Rod | R16 | 6 | OCAYN | Small Head and Lock Cam |
| FR368 | 10 | OBQUE | Brayer Fountain Throw-Off Plate Stud | R17 | 3 | OCAZE | Roller Arm |
| FR43 | 10 | OBRAY | Brayer Fountain Throw-Off Rod | R17N | Not Shown | OCBAD | Roller Arm Stud Nut |
| FR9014 | Not Shown | OBRED | Brayer Fountain Driver | R178 | 6 | OCBEG | Roller Arm Stud |
| | Not Shown | OBRIG | Brayer Fountain Driver Screw | R17W | 3 | OCBIN | Roller Arm Washer |
| FR90348 | | OBROT | Motor Bracket | R17WS | 1 | OCBOR | Roller Arm Washer Screw |
| RIA | 3 | OBRUZ | Motor Bracket Motor Bracket Screw | R18 | 5 | OCBUM | Gripper Cam Roller |
| RIS | Not Shown | OBSAK | Motor Bracket Set Screw (Short) | RISSA | 6 | OCCAL | Gripper Cam Roller Stud |
| RISS | | OBSEZ | Motor Bracket Set Screw (Snort) | RISSN | Not Shown | OCCEB | Gripper Cam Roller Stud Nut |
| RISSN | Not Shown | OBSEZ | Motor Bracket Set Screw Nut Motor Bracket Set Screw (Long) | R20 | 10 | OCCIR | Hand Feed Table Bracket |
| R13488 | 3 | OBSIN | Motor Bracket Set Screw (Long) Motor Bracket Rail (Short) | R21 | 6 | OCCOF | *Roller Frame, Left |
| RJAA | 3 | OBSUT | Motor Bracket Rail (Snort) Motor Bracket Rail Nut | R21S | 6 | OCCUR | Roller Frame Arm Stud |
| R3N | | OBSUT | Motor Bracket Rail Nut Motor Bracket Rail Screw | P22 | 3 | OCDAM | Roller Frame, Right |
| RIS | 3 | | Motor Bracket Rail Screw Motor Bracket Rail Screw Washer | R2216 | 3 | OCDET | Disc Lever Com |
| R3W | 3 | OBTEK | Motor Bracket Rail Screw wasner | R2214S | Not Shown | OCDE | Disc Lever Cam Screw |
| R33/2 | 3 | OBTIN | Motor Bracket Rail (Long) Hand Feed Gear and Pinion Guard | RZJA | Not Shown | OCDOR | Name Plate |
| RI | Not Shown | OBTOG | Hand Feed Gear and Pinson Guard | R23A R23P | Not Shown | OCDUM | Name Plate Pin |
| RIS | Not Shown | OBTUS | Hand Feed Gear and Pinion Guard Screw | R23P R23S | Not Shown | OCEBI | Name Plate Screw |
| Rs | 3 | OBVAH | Disc Gear Guard | R238 | | OCECA | Fly Wheel |
| R8S | Not Shown | OBVEY | Disc Gear Guard Screw | | 1 | OCEDY | Fly Wheel Key |
| R63 | 3 | OBVIT | Form Roller Guard | R26K | 1 | OCEDY | Fly Wheel Key Roller Truck |
| RF-1 | 2 | OBVOL | Gear and Pinion Guard | | 1 | OCEGO | |
| RF-18 | 2 | OBVUD | Gear and Pinion Guard Screw | R28L | 3 | | Chase Lug (Bottom) Chase Lug Nut |
| :0 | 5 | OBWAT | *Frame | R28LN | Not Shown | OCEMS | Chase Lug Nut |
| 1A | 4 | OBWEX | Roller Arm Bracket | R28LP | Not Shown | OCEJA | Chase Lug Pin |
| RIK | 4 | OBWIN | Roller Arm Bracket Key | R2836 | | OCEKL | Chase Hook |
| 18 | 1 | OBWOP | Roller Arm Bracket Screw (Short) | R30 | 5 | OCETI | |
| 2155 | Not Shown | OBWUJ | Roller Arm Bracket Screw (Long) | R30E | - 3 | OCEMP | Chase Hook Lever Spring |
| 1W | Not Shown | OBXAC | Roller Arm Bracket Washer | R30H | 5 | OCENT | Chase Hook Lever Spring Hanger |
| 2.5 | 5 | OBXEL | *Bed | R30L | 5 | OCEPU | Chase Hook Lever |
| RITES | 6 | OBXIP | *Adjustable Bed Track, Left | R30LS | 6 | OCERD | Chase Hook Lever Screw |
| RITCS | 6 | OBXOR | Adjustable Bed Track Screw | R30N | 6 | OCESA | Chase Hook Nut |
| RITR | Not Shown | OBXUM | Adjustable Bed Track Chase Stop (Side) | R30S | 5 | OCETH | Chase Hook Screw |
| 375 | 5 | OBYAT | Adjustable Bed Track Adjusting Screw | R31 | . 5 | OCEVL | *Gripper Bar |
| | | | (Upper) | R31E | 6 | OCEWS | Gripper Bar Spring |
| MA | 5 | OBYBU | *Platen | R31H | 6 | OCEXI | Gripper Bar Spring Hook |
| 4PL | 10 | OBYCK | Cutting Plate | R31P | Not Shown | OCEZA | Gripper Bar Pin |
| ATA | 5 | OBYDO | *Adjustable Bed Track, Right | R32 | 5 | OCFAB | Gripper Bar Roller |
| 4TS | 5 | OBYET | Adjustable Bed Track Adjusting Screw | R32N | Not Shown | OCFEK | Gripper Bar Roller Screw Nut |
| 410 | | | (Lower) | R32S | Not Shown | OCFIS | Gripper Bar Roller Screw |
| | 4 | OBYFA | Rocker Lock | R11 | Not Shown | OCFOM | *Cam Roller |
| t6 t6B | Not Shown | OBYGI | Rocker Lock Spring | R335 | Not Shown | OCFUL | *Cam Roller Stud |
| 16R | Not Showit | OBYHA | Rocker Lock Spring Rod | R33SN | Not Shown | OCGAP | Cam Roller Stud Nut |
| 688 | Not Shown | OBVID | Rocker Lock Set Screw | R33T | 5 | OCGES | Cam Roller Oil Tube |
| | Not Shown | OBYJU | *Disc | R33TC | Not Shown | OCGIN | Cam Roller Oil Tube Clamp |
| 2714 27148 | Not Shown | OBYKA | Disc Stud | RESTCP | Not Shown | OCGOR | Cam Roller Oil Tube Clamp Pin |
| | Not shown | OBYLE | Disc Bracket | R36 | 9 | OCCUP | Disc Lever Cam Roller |
| R8A P8C | 3 | OBYMO | Disc Bracket Oil Cup | R36S | 9 | OCHAW | Disc Lever Cam Roller Stud |
| | 3 | OBYMO | Disc Bracket Screw | R16SC | Not Shown | OCHET | Disc Lever Cam Roller Stud Cotter |
| RSS | Not Shown | OBYOM | | R37-1 | 9 | OCHIF | *Adjustable Disc Lever |
| 8SW | Not Shown | OBYPA | Small Disc Gear | R37-1N | Not Shown | OCHOP | Adjustable Disc Lever Adjusting Sc |
| 110 | 3 | OBYPA | Small Disc Gear Lock | 237-114 | and Gliowin | | Nut |
| RIOC | | OBYKL | Small Disc Gear Lock Small Disc Gear Lock Limit Pin | R37-1P | 9 | OCHUM | |
| HOCP | Not Shown | | Small Disc Gear Lock Limit Pin Small Disc Gear Lock Spring | R37-1F | 9 | OCIBA | Adjustable Disc Lever Adjusting Sc |
| 10E | Not Shown | OBYTU | Small Disc Gear Lock Spring Small Disc Gear Key | R37-15 | 9 | OCICE | Adjustable Disc Lever Link |
| HOK | Not Shown | OBYUK | | R37-2N | Not Shown | OCIDI | Adjustable Disc Lever Link Stud W |
| 10P | Not Shown | OBYVI | Small Disc Gear Pin | W37-214 | avor Stillowii | ocini. | Nut |
| 10W | Not Shown | OBYWA | Small Disc Gear Washer | R37-2P | | OCIFO | Adjustable Disc Lever Link Pin |
| 21056 | 3 | OBYXA | Disc Gear Sleeve | R37-2P R37-2PC | Not Shown | OCIGU | Adjustable Disc Lever Link Pin Cot |
| 1034B | Not Shown | OBYZO | Disc Gear Sleeve Ball | | Not Shown | OCIGU | Adjustable Disc Lever Link Pin Co |
| 10%CA | 3 | OBZAL | Disc Gear Lock Collar | R37-2S | | | Adjustable Disc Lever Link Stud Adjustable Disc Lever Link Stud W |
| 21014CAS | S Not Shown | OBZES | Disc Gear Set Screw | R37-28W | Not Shown | OCIJU | Adjunctible Disc Lever Link Stud W |
| 111 | 3 | OBZIF | Large Disc Gear | R37-3 | 9 | OCIKE | Adjustable Disc Lever Arm Adjustable Disc Lever Arm Pin |
| RIIK | Not Shown | OBZOR | Large Disc Gear Key | R37-3P | Not Shown | OCILD | |
| MILLE | Not Shown | | Large Disc Gear Lock Washer | R37-4 | 9 | OCIMF | Adjustable Disc Lever Bracket |
| 2118 | Not Shown | OCABE | Large Disc Gear Screw | R37-48 | Not Shown | OCINT | Adjustable Disc Lever Bracket Scre |
| | Not Shown | OCADU | Large Disc Gear Washer | R37-488 | Not Shown | OCIPS | Adjustable Disc Lever Bracket Set S |
| | | | | R37.5 | 9 | OCIRT | |
| R11W | 6 | OCAFI | Crank Shaft | R37-5 R37-5LW | Not Shown | | Adjustable Disc Lever Shaft Adjustable Disc Lever Shaft Lock Wa |

*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts.

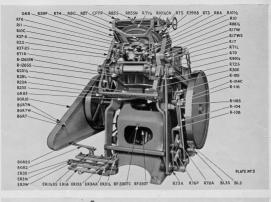

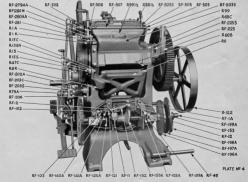

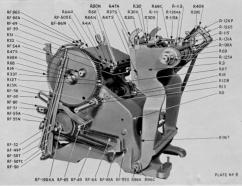

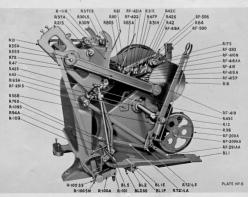

| Part | Part Shown | | | Part | Part Shown | | |
|----------------|-----------------|-------------------------|--|-------------------------|------------------------|-------|---|
| Part Number | Plate No. | Code | Name and Description | Part Number | Plate No. | Code | Name and Description |
| R37-58 | Not Shown | OCITI | Adjustable Disc Lever Shaft Screw | R76SN | Not Shown | OCUFI | Throw-Off Outer Arm Screw Nut |
| R37-6 | 3 | OCIVU | Adjustable Disc Lever Shaft Collar | R78A | 8 | ocuas | *Throw-Off Lever |
| R37-688 | Not Shown | ocimo | Adjustable Disc Lever Shaft Collar Set | R78B R78BA | 8 | OCUML | Throw-Off Lever Bushing Throw-Off Lever Latch Bushing |
| R38 | 9 | ocixi | *Silent Pawl Roller Cup | R780A | 8 | OCUKE | Throw-Off Lever Catch Bushing Throw-Off Lever Oil Cup |
| R38R | 9 | OCIXI | Silent Pawl Roller Cup | R78GA | 8 | OCULP | Throw-Off Sliding Bar Gib |
| R36W | 9 | OCIZE | Silent Pawl Retaining Plate | R78GS | Not Shown | OCUMB | Throw-Off Sliding Plate Gib Screw |
| R3816 | 9 | OCJAM | *Silent Pawl Roller Carrier | R78GSW | Not Shown | OCUNT | Throw-Off Sliding Plate Gib Screw |
| R3814EA | 9 | OCJEG | Silent Pawl Plunger Spring | | | | Washer |
| R3814K | Not Shown | OCJIT | Silent Pawl Key | R78L | 8 | OCUPA | Throw-Off Lever Latch |
| R381/2PA | 9 | ocjos | Silent Pawl Plunger | R78LC | 8 | OCURT | Throw-Off Lever Connection |
| R39 | 1 | ocjuz | *Ink Roller Double Saddle | R78LP | . 8 | OCUSP | Throw-Off Lever Latch Pin |
| R39BB | 3 | OCKAR | Ink Roller Saddle Ball Bearing | R78LPC | Not Shown | OCUTI | Throw-Off Lever Latch Pin Cotter |
| R39C P39E | Not Shown | OCKEJ | Ink Roller Saddle Rod Cotter Ink Roller Saddle Spring | R78PS | 8 | OCUVE | *Throw-Off Lever Shear Pin Throw-Off Lever Shear Pin Swivel |
| R39E | 5 9 | OCKOP | Ink Roller Saddle Spring Ink Roller Saddle Lifter | R78PSS | | OCUXI | Throw-Off Lever Shear Pin Swivel Throw-Off Lever Shear Pin Swivel Set |
| R39D | 3 | OCKUN | Ink Roller Saddle Pin, Right | 21,02,00 | | OCUAL | Screw |
| RJ9RP | Not Shown | OCLAS | Ink Roller Saddle Rod Pin | R78SAA | 8 | OCUYN | Throw-Off Lever Screw |
| R3916P | 1 | OCLEY | Ink Roller Saddle Pin, Left | R78SN | | ocuzo | Throw-Off Lever Screw Nut |
| R40R | 5 . | OCLIV | *Ink Roller Saddle Rod | R7816A | 8 | OCVAP | Throw-Off Lever Shear Pin Latch Lever |
| R42 | 6 | OCLOP | Rocker Box Cap | R78348 | 8 | OCVEM | Throw-Off Lever Shear Pin Latch Lever |
| R42C | 6 | OCLUB | Rocker Box Oil Cup | | | | Pin |
| R42S | 6 | OCMAT | Rocker Box Screw | R79A | 4 | OCVID | Throw-Off Lever Bracket |
| R43 | 6 | OCMED | Crank Shaft Box | R798 | Not Shown | OCVOT | Throw-Off Lever Bracket Screw |
| R43C | 6 | OCMIP | Crunk Shaft Box Oil Cup | R7988 | Not Shown | ocvux | Throw-Off Lever Bracket Set Screw |
| R438 | 6 | осмок | | R79SSN R79SW | Not Shown | OCWAN | Throw-Off Lever Bracket Set Screw Nu |
| R43W R45 | Not Shown | OCMUB | Crank Shaft Box Washer *Ink Roller Saddle Stud | R79SW R80 | Not Shown | OCWET | Throw-Off Lever Bracket Screw Washer Gripper, Left |
| R45F | Not Shown | OCNEG | 'Ink Roller Saddle Stud Ink Roller Saddle Stud Oil Packing | R80C | | OCWOF | Extension Gripper, Left |
| R45K | Not Shown | OCNIT | Ink Roller Saddle Stud Guide Key | RECA | 9 | OCWUB | Gripper Extension 1" long |
| R45W | Not allown 2 | OCNOS | Ink Roller Saddle Stud Packing Plate | RSICB | 9 | OCXAB | Gripper Extension 2" long |
| R45WP | Not Shown | OCNUM | | RSICD | | OCXEL | Gripper Extension 3" long |
| 10.000 | NOT DITOWN | 00110111 | Pin | RROCE | 9 | OCXIP | Gripper Extension 4" long |
| R47 | 6 | OCOBR | *Side Arm | REICE | | OCXOF | Gripper Extension Finger |
| R47B | Not Shown | OCOCA | Side Arm Bushing | REON | 5 | OCXUM | Gripper Nut |
| R47C | 4 | OCODI | Side Arm Oil Cup | RRIG | 6 | OCYAB | Gripper Bolt |
| R478 | 5 | OCOFE | Side Arm Wrist Pin | R81 | 6 | OCYES | Gripper, Right |
| R55A | - 6 | OCOGU | Side Arm Washer | R81C | 9 | OCYIL | Extension Gripper, Right |
| R558 | 6 | OCOHL | Side Arm Washer Screw | R83 | 10 | OCYON | "Hand Feed Table |
| R61 | 9 | ocoli | Gripper Wrench | R83S | Not Shown | OCYUC | Hand Feed Table Screw |
| R62 | Not Shown | OCOKU | Rocker Arm | RESL | 9 | OCZAL | Fountain Side Frame, Left |
| R62P | Not Shown | OCOLD | Rocker Arm Pin | R85N R85R | 9 | OCZED | Fountain Side Frame Cap Screw Nut |
| R63 R63B | 10 Not Shown | OCOMA | *Roller Stock Roller Stock Steel Ball | R8SR R8SS | 3 | OCZIM | Fountain Side Frame, Right Fountain Adjusting Screw |
| R63B | Not Shown | OCOPE | Roller Stock Steel Ball Roller Stock Ball Spring | R85SN | 3 | OCZUP | Fountain Adjusting Screw Wing Nut |
| R64 | Not Shown | OCORP | Tympan Bale, Upper | RAST | 9 | ODABE | Fountain Thumb Screw |
| R64L | 9 | OCOSK | Tympan Bale Lifter | R8514 | 9 | ODACH | *Fountain Ink Roll |
| P64P | | OCOTH | Tympan Bale Rivet | PasieR | Not Shown | ODADS | Fountain Ink Roll Bushing |
| R6416 | 5 | OCOVR | Tympan Bale, Lower | R86C | Not Shown | ODAFI | Fountain Side Frame Oil Cup |
| R65A | 6 | OCOWL | Platen Ear, Left | R86L | 9 | ODAGU | Fountain Side Frame Cap, Left |
| R65P | Not Shown | OCOXE | Platen Ear Pin | RSONP | Not Shown | ODAHL | Fountain Side Frame Cap Screw Pin |
| R658 | Not Shown | OCOYA | Platen Ear Screw | R86P | Not Shown | ODAJE | Fountain Side Frame Cap Dowel Pin |
| R66 | . 5 | OCOZU | Platen Rar, Right | R86R | 9 | ODAKU | Fountain Side Frame Cap, Right |
| R67 | 5 | OCPAF | *Gripper Cam | R86S | Not Shown | ODALP | Fountain Side Frame Cap Screw |
| R67P | 6 | OCPEM | Gripper Cam Pin | R87 | 3 | ODAMF | Fountain Bracket |
| R67PSS | Not Shown | OCPID | Gripper Cam Pin Set Screw | R87S | Not Shown | ODANT | Fountain Bracket Screw |
| R68 R68B | 5 4 | OCPUF | Main Shaft Bushing | R873/2 R873/4L | 9 Not Shown | ODAPR | Fountain Cover Fountain Cover Latch |
| RISBP | Not Shown | OCOAW | Main Shaft Bushing Main Shaft Bushing Pin | R8735R | Not Shown Not Shown | ODASK | Fountain Cover Latch Fountain Cover Rivet |
| R68C | Not Shown | OCOED | Main Shaft Bushing Pin Main Shaft Oil Cup | R88 | Not Shown | ODATA | Fountain Cover Rivet Fountain Ratchet Lever |
| Rosk | 5 | OCQLI | Main Shaft Key | REEP | 9 | ODATA | Fountain Ratchet Lever Pin |
| R69 | 5 | OCOOB | Back Shaft | R8814 | 3 | ODAWN | Fountain Ratchet Lever Rod |
| R69C | 5 | OCOUA | Back Shaft Oil Cup | R88)5E | Not Shown | ODAXU | Fountain Ratchet Lever Rod Spring |
| R70 | 3 | OCRAN | Throw-Off Saddle | R89 | 9 | ODAYM | Fountain Ratchet |
| R70K | Not Shown | OCREK | Throw-Off Saddle Key | R89K | Not Shown | ODAZL | Fountain Ratchet Key |
| R76SS | Not Shown | OCRIL | Throw-Off Saddle Set Screw | R8935 | 9 | ODBAN | Fountain Ink Blade |
| R71L | . 3. | OCROP | Back Shaft Collar (Left) | R893/S | Not Shown | ODBER | Fountain Ink Blade Screw |
| R71R | 3 | OCRUS | Back Shaft Collar (Right) | R90 | 9 | ODBIT | Fountain Ratchet Pawl |
| R71SS | Not Shown | OCSAP | Back Shaft Collar Set Screw | R90S | 9 | ODBOS | Fountain Ratchet Pawl Screw |
| R72 | 6 | OCSEK | Throw-Off Back Connection | R9035 | 3 | ODBUM | Fountain Driver |
| R72N R72S | Not Shown | OCSOR | Throw-Off Back Connection Nut Throw-Off Back Connection Screw | R903/2S | Not Shown Not Shown | ODCAN | Fountain Driver Screw Fountain Driver Screw Cotter |
| | 3 | | | R903/3SC | Not Shown | | |
| R72SC | Not Shown | OCSUT | Throw-Off Back Connection Screw Cotter | R91 R92 | Not Shown | ODCOP | Fountain Adjusting Block Fountain Cover Knob |
| R7234A | 6 | OCTAV | Throw-Off Lower Connection | R9216 | Not Shown | ODCUT | Fountain Cover Knob Fountain Handwheel |
| R72348 | 6 | OCTEL | Throw-Off Lower Connection Screw | R9234P | Not Shown | ODDAM | Fountain Handwheel Pin |
| R72348N | Not Shown | OCTEL | Throw-Off Lower Connection Screw Throw-Off Lower Connection Screw Nut | R92)5P | Not Shown | ODDEZ | Fountain Handwheel Pin Fountain Front Brace |
| R73A | Not Shown | OCTOR | Throw-Off Slotted Piece | R93S | | ODDIK | Fountain Front Brace Screw |
| R76A | 3 | OCTUF | Throw-Off Outer Arm | R9334 | Not Shown | ODDOL | Fountain Back Separator Rod |
| | | | | | | | |
| R76P | 3 | OCUBA | Throw-Off Outer Arm Pin | R93168 | Not Shown | ODDUF | Fountain Back Separator Rod Screw |
| | Not Shown | OCUBA OCUCH OCUDS | Throw-Off Outer Arm Pin Throw-Off Outer Arm Pin Cotter Throw-Off Outer Arm Screw | R931/(S R94A R94N | Not Shown 6 Not Shown | ODEBA | Fountain Back Separator Rod Screw Throw-Off Outer Arm Stud Throw-Off Outer Arm Stud Nut |

*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts.

IMPORTANT—Be sure to mention size of press for which parts are being ordered.

| Part | Part Shown on Plate No. | Code | Name and Description | Part Number | Part Shown on Plate No. | Code | Name and Description |
|--------|-------------------------------|--------|--|-----------------|-------------------------------|-------|--|
| lumber | | | | | | | |
| 94NW | Not Shown | ODEDU | Throw-Off Outer Arm Stud Washer | RF-5A | 1 | ODMOL | Feeder Drive Gear Guard |
| 9488 | Not Shown | ODEFT | Throw-Off Outer Arm Stud Set Screw | RF-6 | 2 | ODMUY | Feeder Drive Gear Guard Brace |
| 95 | 10 | ODEGA | Motor Belt | RF-6S | 2 | ODNAD | Feeder Drive Gear Guard Brace Sc |
| 96A | 5 | ODEHL | Bed Shaft | RF-8 | Not Shown | ODNEP | Feed Table Lock Screw Shoe |
| 6B | Not Shown | ODEJO | Bed Shaft Bushing | RF-9 | 7 | ODNIB | Feed Table Lock Screw |
| 4C | 5 | ODEKS | Bed Shaft Collar | RF-9N | 7 | ODNOF | Feed Table Lock Screw Nut |
| 6CSS | Not Shown | ODELM. | Bed Shaft Collar Set Screw | RF-10AA | 7 | ODNUH | Feed Table Bracket |
| 6K | Not Shown | ODEMT | Bed Shaft Key | RF-10G | 7 | ODOBS | Feed Table Bracket Gasket |
| 488 | Not Shown | ODENK | Bed Shaft Set Screw | RF-10T | 2 | ODOCK | Feed Table Pinion Shaft Oil Tube |
| 6T | 5 | ODEPS | Bed Shaft Oil Tube | RF-11 | 4 | ODODR | Feed Table Stationery Rail |
| | Not Shown | ODERK | Bed Shaft Oil Tube Clamp | RF-12 | | ODOFT | Feed Table Movable Rail |
| 6TC | | | Bed Shaft Oil Tube Clamp Pin | PF.13 | 7 | ODOGI | Feed Table Adjusting Screw |
| STCP | Not Shown | ODESL | | RF-13W | | ODOGI | Feed Table Adjusting Screw Wash |
| 7 | 9 | | Fountain Front Brace Rod | RF-15 | Not Shown | | |
| 78 | Not Shown | ODEVL | Fountain Front Brace Rod Screw | | 7 | ODOJI | Feed Table Raising Handwheel |
| 8 | 6 | ODEWP | Rocker Lock Shaft | RF-15P | Not Shown | ODOKA | Feed Table Raising Handwheel Pin |
| 8B | 6 | ODEXA | Rocker Lock Shaft Bushing | RF-16 | 7 | ODOLF | Feed Table Release Ratchet Stop |
| 8BSS | Not Shown | ODEYI | Rocker Lock Shaft Bushing Set Screw | RF-18A | 2 | ODOMB | Feed Table Bracket Guard |
| 9 . | 4 | ODEZE | Name Plate | RF-18S | Not Shown | ODONT | Feed Table Bracket Guard Screw |
| 9P | Not Shown | ODFAQ | Name Plate Pin | RF-19 | 7 | ODOPH | *Feed Table Long Back Stop |
| 936 | Not Shown | ODFEW | Fountain Name Plate | RF-19P | Not Shown | ODORI | Feed Table Long Back Stop Taper |
| 934P | Not Shown | ODFIV | Fountain Name Plate Pin | RF-198 | Not Shown | ODOSM | Feed Table Long Back Stop Screw |
| 100A | 6 | ODFOS | Bed Shaft Adjusting Arm | RF-20A | 7 | ODOTU | Feed Table Long Back Stop Brack |
| | 6 | ODFUR | Bed Shaft Adjusting Arm Set Screw Nut | RF-20S | 7 | ODOVL | Feed Table Long Back Stop Brack |
| 100SN | 6 | ODGAS | Bed Shaft Adjusting Arm Set Screw Nut Bed Shaft Adjusting Arm Set Screw | W 100 | , | CHURL | Clamping Screw |
| 10088 | | | ned onsit Adjusting Arm Set Screw | RF-21 | | onome | Feed Table Long Back Stop Post |
| 101 | 6 | ODGED | Bed Shaft Adjusting Screw Swivel Pin | | . 1 | | |
| 104 | 3 | ODGIF | Bed Shaft Adjusting Screw | RF-21SS | Not Shown | ODOXA | Feed Table Long Back Stop Post S |
| 104C | 3 | ODGOL | Bed Shaft Adjusting Collar | | | | Screw |
| 104CP | Not Shown | ODGUP | Bed Shaft Adjusting Collar Pin | RF-22 | 7 | ODOYT | Feed Table Long Back Stop Limit |
| 104CSS | Not Shown | ODHAM | Bed Shaft Adjusting Collar Pin Set Screw | RF-23 | 7 | ODOZN | Feed Table Long Back Stop Limit |
| 105 | 3 | ODHEN | Bed Shaft Adjusting Screw Handwheel | | | | Lock Nut |
| 105P | Not Shown | ODHIP | Bed Shaft Adjusting Screw Handwheel | RF-25A | 7 | ODPAC | Feed Table Short Back Stop |
| | | | Pin | RF-26A | 7 | ODPEW | Feed Table Short Back Stop Clam |
| 106A | Not Shown | ODROB | *Bed Shaft Adjusting Tube | | | | Screw |
| 100A | Not Shown | ODHUS | Bed Shaft Adjusting Tube Bushing | RF-27A | Not Shown | ODPIN | Feed Table Short Back Stop Clam |
| | | ODIBA | Bed Shaft Adjusting Tube Bushing Pin | W 1/W | Not Shown | ODFIN | Screw Nut |
| 107P | Not Shown | ODIBA | med Shart Adjusting Tube Bushing Pin | PF.28A | | oppop | |
| 108 | 3 | ODICT | Bed Shaft Adjusting Screw Bracket | MF-28A | Not Shown | ODPOB | Feed Table Short Back Stop Clam |
| 10888 | Not Shown | ODIDE | Bed Shaft Adjusting Screw Bracket Set | | | | Screw Spring |
| | | | Screw | RF-30AA | 7 | ODPUG | *Feed Table Front Stop |
| 109 | 6 | ODIFR | Bed Shaft Adjusting Scale Pointer | RF-30S | 2 | ODQAF | Feed Table Front Stop Screw |
| 1098 | 6 | ODIGS | Bed Shaft Adjusting Scale Pointer Screw | RF-32A | 7 | ODQEB | Feed Table Front Stop Blast Tubi |
| 110 | 6 | ODIHT | Bed Shaft Adjusting Screw Swivel | RF-33A | 7 | ODOIG | *Feed Table Front Stop Blast Nipp |
| | | | Bracket | RF-34A | Not Shown | ODQOH | Feed Table Front Stop Blast Nipp |
| 110P | Not Shown | ODIJA | Bed Shaft Adjusting Screw Swivel | | | | Tube |
| 1106 | Not Ollowin | 001211 | Bracket Pin | RF-37A | 7 | ODQUI | *Feed Table Front Stop End Blast |
| -1108 | Not Shown | ODIKE | Bed Shaft Adjusting Screw Swivel | | | 00000 | Connection |
| 1105 | MOE SHOWN | ODINE | Bracket Screw | RF-38A | 7 | ODPAT | *Feed Table Front Stop End Blast |
| | | ODILF | Back Shaft Adjusting Screw Swivel Pin | ACC -SOLL | | ODMAL | Shut-Off |
| 111 | 5 | ODILF | | RF-ME | 7 | | Feed Table Front Stop End Blast |
| 113 | 5 | ODIMP | Back Shaft Adjusting Screw Lock Screw | KP-38E | 7 | ODKEM | |
| 113P | Not Shown | ODING | Back Shaft Adjusting Screw Lock Screw | | | | Shut-Off Spring |
| | | | Shoe | RF-38W | Not Shown | ODRIK | Feed Table Front Stop End Blast |
| 115 | 5 | ODIPH | Back Shaft Adjusting Screw Knob | | | | Shut-Off Washer |
| 115P | Not Shown | ODIRT | Back Shaft Adjusting Screw Knob Pin | RF-39 | 5 | ODROF | *Delivery Air Line Screen |
| 116 | 3 | ODISH | Bed Shaft Adjusting Screw Swivel Pin | RF-39BA | Not Shown | ODRUP | *Delivery Air Line Screen Bushing |
| 116N | Not Shown | ODITS | Bed Shaft Adjusting Screw Swivel Nut | RF-39P | Not Shown | ODSAP | *Delivery Air Line Screen Plug |
| 1168 | Not anown | ODIVA | Bed Shaft Adjusting Screw Swivel Screw | RF-40 | 2 | ODSEB | *Delivery Slide Air Tube |
| | Not Shown | ODIWU | Bed Shaft Adjusting Screw Swivel | RF-40P | Not Shown | ODSIC | *Delivery Slide Air Tube Plug |
| 116W | Not Shown | ODIWU | Bed Shaft Adjusting Screw Swivel Washer | RF-40P | Not Shown | ODSON | *Delivery Stide Air Tube Plug *Delivery Bar |
| | | ODIXE | | RF-41 RF-418 | 9 | | |
| 119A | 5 | | Back Shaft Adjusting Screw | | | ODSUM | *Delivery Bar Screw |
| 119N | Not Shown | ODIYL | Back Shaft Adjusting Screw Nut | RF-43 | 9 | ODTAC | *Delivery Bar Sliding Tube |
| 119W | Not Shown | ODIZY | Back Shaft Adjusting Screw Washer | RF-43S | 9 | ODTED | *Delivery Bar Sliding Tube Screw |
| 122 | 4 | ODJAK | Press Pulley | RF-45 | - 1 | ODTIG | Delivery Slide Shaft |
| 125A | 5 | ODJEM | Back Shaft Eccentric | RF-47 | 2 | ODTOK | Delivery Slide Air Tube Roller Ca |
| 126AA | 5 | ODJIX | Back Shaft Eccentric Bracket | RF-478 | 2 | ODTUR | Delivery Slide Air Tube Roller Ca |
| 126P | 5 | ODJOG | Back Shaft Eccentric Bracket Swivel Pin | _ | | | Clamp Screw |
| 1268 | 5 | ODJUF | Back Shaft Eccentric Bracket Swivel Pin | RF-49 | 5 | ODUBL | Delivery Bar Pull-In Spring |
| 1203 | 9 | ODJUP | Set Screw | RF-49P | 5 | ODUCH | Delivery Bar Pull-In Spring Pin |
| | | | Back Shaft Recentric Set Screw | RF-49PC | Not Shown | ODUCH | Delivery Bar Pull-In Spring Pin Delivery Bar Pull-In Spring Pin C |
| 12688 | 3 | ODKAT | | RF-50 | Not Shown | ODUFT | *Delivery Slide |
| 126SSN | 3 | ODKER | Back Shaft Eccentric Set Screw Lock Nut | | | | |
| 126SW | Not Shown | ODKIF | Back Shaft Eccentric Bracket Swivel Pin | RF-50B | Not Shown | ODUGS | Delivery Slide Bushing |
| | | | Set Screw Washer | RF-50P | 2 | ODUHM | |
| 130A | 5 | ODKOB | Back Shaft Adjusting Scale Pointer | RF-50T | 5 | ODUJE | Delivery Slide Oil Tube |
| 1308 | Not Shown | ODKUC | Back Shaft Adjusting Scale Pointer Screw | RF-50TC | 5 | ODUKA | Delivery Slide Oil Tube Clamp |
| 131A | 5 | ODLAS | Back Shaft Adjusting Scale | RF-SOTCS | Not Shown | ODULK | Delivery Slide Oil Tube Clamp Sc |
| 131A | Not Shown | ODLET | Back Shaft Adjusting Scale Pin | RF-51 | 5 | ODUMF | Feeder Ball Bearing Cam Roller |
| | Not shown | ODLE | Feeder Cam Shaft Bracket | RF-52 | 5 | ODUNT | Feeder Ball Bearing Cam Roller P |
| F-1A | | ODLOB | Feeder Cam Shaft Bracket Feeder Cam Shaft Bracket Oil Cup | RF-53A | 2 | ODUNI | *Delivery Slide Shoe |
| F-1C | Not Shown | | | | | | Delivery Slide Shoe Delivery Slide Shoe Set Screw |
| F-18 | Not Shown | ODLUN | Feeder Cam Shaft Bracket Screw | RF-53SS | 2 | ODURB | Lenvery Slide Shoe Set Screw |
| F-2 | 4 | ODMAG | Feed Table Elevator Shaft Bracket | RF-54A | 5 | ODUSC | Delivery Slide Shoe Gib |
| F-28 | Not Shown | ODMEX | Feed Table Elevator Shaft Bracket | RF-55A | 5 | ODUTE | Delivery Slide Shoe Gib Screw |
| | | | Screw | RF-55N | 5 | ODUVR | Delivery Slide Shoe Gib Screw Nu |
| | | | Feed Table Elevator Cam Lever Spring | RF-56 | 5 | ODUWE | |
| R.3 | Not Shown | | | | | | Delivery Slide Hose Nipple |

*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts.

IMPORTANT—Be sure to mention size of press for which parts are being ordered.



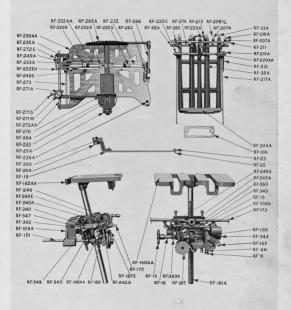


PLATE NE 8

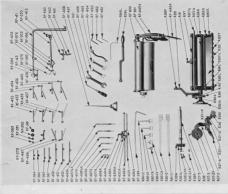

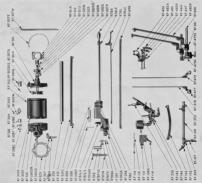

3

| Part | Part Shown on | | | Part | Part Shown | | |
|-------------------|--------------------|--------|---|---------------------|----------------|--------|---|
| Number | Plate No. | Code | Name and Description | Number | Plate No. | Code | Name and Description |
| RF-578 | 2 | ODUYA | Delivery Slide Hose Nipple Clamp Screw | RF-141A | 4 | OFERM | *Blast Valve Cam Lever |
| RF-58 | 2 | ODUZO | Delivery Slide Air Hose | RF-144A | 1 | OFESY | Blast Valve Plunger |
| P-60 | 5 | ODVAP | Delivery Slide Air Tube Lift Lever | RF-144E | 1 | OFETH | Blast Valve Plunger Spring |
| RF-64 | 5 | ODVEC | Delivery Slide Air Tube Lift Lever | RF-144EH | 1 | OFEVA | Blast Valve Plunger Spring Connection |
| | | | Spring | RF-145 | 8 | OFEWT | Continuous Blast Screw |
| RF-65 | 5 | ODVIM | Delivery Slide Air Tube Lift Lever Stud | RF-146 | 8 | OFEXE | Continuous Blast Screw Lock Nut |
| RF-68 | 9 | ODVOH | Feed Bar Large Rubber Sucker Tip | RF-147 | 1 | OFEYR | Blast Valve Plunger Spring Stud |
| RF-69 | 5 | ODVUF | *Feed Air Line Screen | RF-147CP | Not Shown | OFEZO | Blast Valve Plunger Spring Stud Cotte |
| RF-69B | Not Shown | ODWAX | *Feed Air Line Screen Bushing | RF-147W | Not Shown | OFFAB | Blast Valve Plunger Spring Stud Wash |
| RF-70 | 2 | | *Feed Slide Air Tube | RF-150A | 4 | OFFEC | Feed Table Elevator Cam |
| RF-70P | Not Shown | ODWIV | *Feed Slide Air Tube Plug | RF-150SS | Not Shown | OFFID | Feed Table Elevator Cam Set Screw |
| RF-70S RF-71 | Not Shown | | *Feed Slide Air Tube Plug Screw | RF-151 | 7 | OFFOJ | Feed Table Elevator Shaft |
| | 1 | ODXAR | Feed Slide Air Hose | RF-152 | 4 | OFFUT | *Feed Table Elevator Shaft Cam Lever |
| RF-72 RF-72CP | | | | RF-152E | Not Shown | OFGAX | Feed Table Elevator Shaft Cam Lever |
| RF-72CP | Not Shown | ODXEY | Feed Slide Air Tube Roller Carrier Cotter | RF-152H | Not Shown | | Spring |
| RF-725 | 1 | ODXIT | Feed Slide Air Tube Roller Carrier | RF-15ZH | Not Shown | OFGEH | Feed Table Elevator Shaft Cam Lever |
| KP-725 | 1 | ODXII | Clamp Screw | RF-152K | Not Shown | | Spring Pin |
| RF-74 | 1 | ODVON | Feed Slide Air Tube Pull Down Spring | RF-152K | Not shown | OFGIN | Feed Table Elevator Shaft Cam Lever |
| RF-75 | 1 | ODXUN | *Feed Slide Air Tube Pull Down Spring | RF-152P | Not Shown | OFGOP | Key: Feed Table Elevator Shaft Cam Lever |
| RF-75T | 1 | | *Feed Slide Oil Tube | WE-1275 | Not anown | OFGOP | Roller Pin |
| RF-78 | i | | *Feed Slide Shoe | RF-153 | 4 | OFGUB | Feed Table Rievator Shaft Cam Lever |
| RF-78SS | 1 | ODYID | Feed Slide Shoe Set Screw | RF-155 | | OrGUB | Roller |
| RF-80 | 5 | ODYOF | | RF-160AA | 7 | OFHAT | Feed Table |
| RF-84 | 1 | | Feed Slide Hose Nipple | RF-161A | 7 | OFHEC | Feed Table Rack |
| RF-84S | 1 | | Feed Slide Hose Nipple Clamp Screw | RF-161K | Not Shown | OFHIS | Feed Table Rack Key |
| RF-86A | 5 | ODZKI | *Feed Bar Air Tube Connection | RF-161W | Not Shown | OFHOP | Feed Table Bumper Washer |
| RF-86N | 5 | ODZIK | Feed Bar Limit Screw Nut | RF-162AA | 7 | OFRUG | Feed Table Front Bar |
| RF-86S | 5 | ODZOL | Feed Bar Limit Screw | RF-162P | | OFIBR | Fred Table Front Bar Taper Pin |
| RF-87 | Not Shown | ODZUM | *Feed Bar Air Tube Connection Plug | RF-1628 | | OFICI. | Feed Table Front Bar Screw |
| RF-95A | 5 | OFABS | Feed and Delivery Slide Spring Bracket | RF-165 | 7 | OFIDO | Feed Table Adjusting Screw Crank |
| RF-95S | 5 | OFACT | Feed and Delivery Slide Spring Bracket | RF-16588 | Not Shown | OFIFE | Feed Table Adjusting Screw Set Screw |
| | | ormor | Screw | RF-168AA | 7 | OFIGA | Feed Table Pinion Shaft |
| RF-100 | 2 | OFADA | Delivery Air Valve Bracket | RF-169 | 7 | OFIHM | *Feed Table Pinion |
| RF-1005 | Not Shown | OFAFR | Delivery Air Valve Bracket Screw | RF-169K | Not Shown | OFIKE | Fred Table Pinion Key |
| RF-101 | . 2 | OFAGL | *Delivery Air Valve Cam Lever | RF-170A | 1 | OFILS | Feed Table Guide Finger Bracket, Rigi |
| RF-101W | Not Shown | OFAHN | Delivery Air Valve Cam Lever Spacing | RF-170S | 1 | OFIMT | Feed Table Guide Finger Bracket Scree |
| | | | Washer | RF-171A | 1 | OFING | Feed Table Guide Finger Bracket, Left |
| RF-102 | 4 | OFAJU | Delivery Air Valve Cam Roller Pin | RF-172 | 1 | OFIPU | *Feed Table Guide Finger |
| RF-103 | 4 | OFAKL | Delivery Air Valve Cam Roller | RF-1728 | 1 | OFIRE | Feed Table Guide Finger Screw |
| RF-104 | Not Shown | OFALT | Delivery Air Valve Cam Lever Shaft | RF-173 | 7 | OFISH | Feed Table Guide Finger Shaft |
| RF-105A | 4 | OFAMB | Delivery Air Valve Cam | RF-173CP | Not Shown | OFITS | Feed Table Guide Finger Shaft Cotter |
| RF-105SS | Not Shown | OFAND | Delivery Air Valve Cam Set Screw | RF-17388 | Not Shown | | Feed Table Guide Finger Shaft Set Scre |
| RF-106 | . 8 | OFAPH | Delivery Air Valve Bracket Pipe Elbow | RF-175 | 7 | OFIWO | *Feed Table Release Handle |
| RF-107 | 8 | OFARQ | Delivery Air Valve Bracket Pipe Short | RF-176 | 1 | OFIXU | Feed Table Release Handle Pin |
| | | | Nipple | RF-177 | 1 | OFIYA | Feed Table Release Handle Swivel Pin |
| RF-108 | 8 | OFAST | Delivery Air Valve Bracket Pipe Long | RF-180 | 7 | OFIZL | Feed Table Worm |
| | | | Nipple | RF-180K | | OFJAZ | Feed Table Worm Key |
| RF-109A | 4 2 | OFATU | Delivery Cutout Valve Cam | RF-182 | Not Shown | | Feed Table Ratchet Wheel Sleeve |
| | | | *Delivery Cutout Valve Cam Lever | RF-185 | 7 | OFJIG | Feed Table Ratchet Wheel |
| RF-113 RF-113P | Not Shown | OFAWL | *Delivery Cutout Valve | RF-185K | | OFJOB | Feed Table Ratchet Wheel Key |
| | | OFAXO | Delivery Cutout Valve Cotter | RF-187 | 2 | OFJUS | Feed Table Ratchet Pawl |
| RF-1138 RF-114 | Not Shown | OFAZL | Delivery Cutout Valve Screw Delivery Cutout Valve Plunger | RF-187P RF-187E | 2 | OFKAN | Feed Table Ratchet Pawl Pin |
| | 8 | | | | 7 | | Feed Table Ratchet Pawl Spring |
| RF-115 | 8 2 | OFBAN | Delivery Cutout Valve Plunger Spring Delivery Air Valve | RF-187ES RF-188A | Not Shown | OFKIP | Feed Table Ratchet Pawl Spring Screw |
| | Not Shown | OFBIP | *Delivery Air Valve Cotter | RF-188SS | Not Shown | OFKUD | *Feed Table Ratchet Pawl Lever Feed Table Ratchet Pawl Spring Screw |
| RF-116 | Not snown 8 | OFBOX | Delivery Cutout Valve Hose Nipole | RF-18833 | Not Shown | OFLAM | Feed Table Ratchet Pawl Spring Screw Feed Table Ratchet Pawl Spring Wash |
| RF-117 | 2 | OFBUR | Delivery Cutout Valve Air Hose | | Not snown 2 | | Feed Table Ratchet Pawl Spring Wash |
| RF-117 | Not Shown | OFCAB | Blast Muffler Nipple | RF-189CP | Not Shown | OFLEX | Feed Table Ratchet Latch Stud Feed Table Ratchet Latch Pin Cotter |
| RF-120A | 1 | OFCED | Feed and Blast Valve Bracket | | | | |
| kF-120% | Not Shown | OFCIF | Feed and Blast Valve Bracket Screw | RF-189W | Not Shown | OFLOY | Feed Table Ratchet Latch Pin Cotter Washer |
| F-121 | 4 | OFCOG | Feed Air Valve Cam Lever | RF-190A | 2 | OFLUW | |
| | Not Shown | OFCUK | Feed Air Valve Cam Lever Screw | RF-195A | 2 | OFMAD | Feed Table Ratchet Pawl Latch Feed Slide Air Tube Raising Cam |
| PR-12188N | Not Shown | OFDAW | Feed Air Valve Cam Lever Screw Lock | RF-195A | 4 | OFMEN | Feed Slide Pushout Cam |
| | THE DESCRIPTION IN | OL DAW | Not | RF-195A | 4 | OFMIS | Delivery Slide Air Tube Raising Cam |
| PF.122 | 8 | OFDEY | Feed Table Blast Hose | RF-197A | | OFMOT | Delivery Slide Air Tube Raming Cam Delivery Slide Pushout Cam |
| RF-122C | 8 | OFDII | Feed Table Blast Hose Clamp | RF-199A | 4 | | *Forder Cam Shaft |
| RF-124 | Not Shown | OFDON | Feed Air Valve Cam Lever Shaft | RF-199KA | - | OFNAG | Feeder Cam Shaft Key |
| RF-125A | 4 | OFDUL | Feed Air Valve Cam | RF-200A | 6 | OFNET | Feeder Drive Gear |
| RF-126A | 8 | OFEBY | *Riost Muffler | RF-200KA | 6 | OFNIC | Feeder Drive Gear Key |
| RF-127A | 1 . | OFECT | *Rlast Moffler Plate | RF-200KA | 4 | OFNOR | *Feeder Drive Gear Key *Feeder Drive Intermediate Gear |
| F-130 | 1 | OFEDA | Feed Starting Lever Bracket | RF-203A | Not Shown | | Feeder Drive Intermediate Grar Shaft |
| RF-133 | 1 | OFEFI | *Feed Starting Lever | RF-203C | 4 | OFOBA | Feeder Drive Intermediate Gear Shaft |
| RF-134 | 1 | OFEGL | Feed Starting Lever Latch Pin | KF-200C | | OFUBA | Oil Cup |
| RF-134CP | Not Shown | | Feed Starting Lever Latch Pin Feed Starting Lever Latch Pin Cotter | RF-203S | 4 | OFOCE | Feeder Drive Intermediate Gear Shaft |
| RF-134W | Not Shown | OFEJY | Feed Starting Lever Latch Pin Washer | A 2000 | | O. OCE | Screw |
| RF-136 | 1 | OFEKU | Feed Starting Lever Latch Pin Wasner Feed Starting Lever Latch | RF-205A | Not Shown | OFODI | Feeder Drive Intermediate Gear Bushin |
| EF-135 | 1 | OFELN | Blast Valve Connection | RF-205A RF-206 | Not Shown | OFOGU | Feeder Drive Intermediate Gear Bushii Feeder Drive Intermediate Gear Brack |
| RF-138 | i | OFEMA | Blast Adjusting Screw | RF-207A | 7 | OFOHA | *Feed Table Stripper Wire Bracket |
| PR.130 | 1 | OFENS | Blast Adjusting Screw Nut | RF-207N | 7 | OFOJY | Feed Table Stripper Wire Bracket Feed Table Stripper Wire Bracket Lock |
| | 4 | OFEPU | Blast Valve Cam | are-20114 | , | U. UJI | Nut |


*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts.

IMPORTANT—Be sure to mention size of press for which parts are being ordered.

| | Part Shown | | | Part | Part Shown | | |
|--|---|--|--|--|--|--|---|
| Part Number | Plate No. | Code | Name and Description | Number | Plate No. | Code | Name and Description |
| | | | | | | | |
| F-207S | Not Shown | OFOKI | Feed Table Stripper Wire Bracket Screw | RF-271A | 7 | OFZIF | Delivery Table Rear Jogger Post |
| F-20916 | 7 | OFOLK | Feed Table Stripper Wire | RF-271P | Not Shown | OFZOR | Delivery Table Rear Jogger Stop Pin |
| F-210A | 7 | OFOMT | Feed Table Stripper Wire Clamp Screw | RF-2718 | 7 | OFZUN | Delivery Table Rear Jogger Post Screw |
| F-210W | Not Shown | OFONY | Feed Table Stripper Wire Clamp Screw | RF-231W | 7 | OGABE | Delivery Table Rear Jogger Post Wash |
| F-211 | 7 | OFOPR | Washer Feed Table Stripper Wire Bracket Shaft | RF-271WS | Not Shown | OGACI | Delivery Table Rear Jogger Post Wash Screw |
| F-211CP | Not Shown | OFORK | Feed Table Stripper Wire Bracket Shaft Spring Cotter | RF-272AA | 7 | OGADO | Delivery Table Rear Jogger Operating Shaft |
| RF-212 | 7 7 | OFOSQ OFOTA | Feed Table Feeler Spring Feed Table Feeler | RF-272E | 7 | OGAFU | Delivery Table Rear Jogger Operating Shaft Spring |
| | Not Shown | OFOVI | Feed Table Feeler Set Screw Feed Table Feeler Shaft Stop Collar | RF-272ES | Not Shown | OGAGY | Delivery Table Rear Jogger Operating Shaft Spring Screw |
| RF-215A | Not Shown | OFOXL | Feed Table Feeter Shaft Stop Collar Set | RF-273 | 7 | OGAHR | Delivery Table Rear Jogger Guide Rod |
| | Not snown | | Screw *Freed Table Feeler Lift Rod | RF-273SS | Not Shown | OGAJA | Delivery Table Rear Jogger Guide Rod Set Screw |
| RF-217A RF-217P | Not Shown | OFOZE | Fred Table Feeler Lift Rod Spring Pin | RF-279AA | 4 | OGAKR | Delivery Table Jogger Cam Lever |
| RF-217F | Not Shown | OFBAD | *Feed Table Feeler Lift Rod End | RF-280AA | 4 | OGALP | Delivery Table Jogger Cam Lever Screen |
| CF-218A CF-220AA | 7 | OFFEB | Feed Table Feeler Shaft | RF-280N | 4 | OGAMB | Delivery Table Jogger Cam Lever Scre |
| 2F-220AA | 7 | OFPIO | Feed Table Feeler Shaft Collar | | | | Nut |
| | Not Shown | OFPOK | Feed Table Feeler Shaft Collar Set Screw | RF-281 | 4 | OGANT | Delivery Table Jogger Cam Lever Roll |
| RF-222A | Not allowin | OFPUZ | Feed Table Feeler Trip | RF-282 | 6 | OGAPL | Delivery Table Jogger Cam Lever Roll |
| F-222AS | Not Shown | OFRAT | Ford Table Feeler Trip Screw | | | | Pin |
| | Not Shown | OFREK | Feed Table Feeler Trip Set Screw | RF-288 | 8 | OGARD | Throw-Off Plunger |
| | Not Shown | OFRIB | Feed Table Feeler Trip Set Screw Nut | RF-288P | 8 | OGAST | *Throw-Off Plunger Pin |
| RF-22288N | Not Shown | OFROG | Delivery Table Bracket | RF-289 | 8 | OGATH | Throw-Off Plunger Spring |
| RF-2258 | / . | OFRUN | Delivery Table Bracket Screw | RF-291AA | 6 | OGAVR | *Throw-Off Sliding Bar |
| | 2 | OFSAD | Delivery Table Post | RF-291B | Not Shown | OGAWK | Throw-Off Sliding Bar Bushing |
| RF-230AA | 7 | | *Delivery Table | RF-2918 | 6 | OGAXO | Throw-Off Sliding Bar Stud |
| | 7 | OFSIK | Delivery Table Set Screw | RF-292 | 8 | OGAYE | *Throw-Off Sliding Bar Guide |
| RF-230SS RF-232 | 7 | OFSON | Delivery Table Set Screw Delivery Table Jogger Plate, Right | RF-293 | Not Shown | OGAZU | Throw-Off Sliding Bar Guide Pin |
| | 7 | OFSUR | Feed Table Short Back Stop Plate | RF-298 | 8 | OGBAC | Throw-Off Rubber Hose |
| RF-233 | , | OFTAC | Delivery Table Locking Pin | RF-300 | 8 | OGBED | Pump Cylinder |
| RF-235A | Not Shown | OFTEB | Delivery Table Locking Pin Cotter | RF-301 | . 8 | OGBIF | *Pump Top |
| | Not snown | OFTIP | Delivery Table Locking Pin Spring | RF-301S | 8 | | Pump Top Screw |
| RF-235E | Not Shown | OFTOD | Delivery Table Locking Pin Washer | RF-302B | | OGBUH | Pump Top Bushing |
| RF-235W | Not Shown | OFTUF | Feed Starting Lever Screw | RF-302BSS | | OGCAI | Pump Top Bushing Set Screw |
| ₹F-236 | Not Shown | OFTIBA | Ferd Starting Lever Screw Nut | RF-302G | | OGCEK | Pump Top Gland |
| RF-236N | | OFUCE | Feed Table Elevator Adjusting Screw | RF-302N | 8 | OGCIL | Pump Top Gland Nut |
| RF-240A | .7 | OFUCE | Bracket | RF-302NSS | | OGCOM | Pump Gland Nut Set Screw |
| | 7 | OFUDI | Feed Table Elevator Adjusting Screw | RF-303A | | OGCUN | *Pump Base |
| RF-240R | 7 | OFODI | Spring | RF-303S | 8 | OGDAP | Pump Base Screw |
| | | OFUET | Feed Table Elevator Adjusting Screw | RF-307A | 8 | OGDEO | *Pump Piston |
| RF-240S | 7 | | Feed Table Elevator Adjusting Screw | RF-307E | 8 | OGDIR | Pump Piston Expanding Spring |
| RF-240SS | Not Shown | OFOGO | Bracket Set Screw | RF-307P | 8 | OGDOS | Pump Piston Rod Packing |
| | 7 | OFUHL | Feed Table Elevator Trip Trigger | RF-307W | 8 | OGDUT | Pump Piston Leather Ring |
| RF-242A | 1 | OFUIA | *Fred Table Elevator Trip Return Lever | RF-308 | 8 | OGEBI | *Pump Valve |
| RF-243 RF-243P | Not Shown | OFUKR | Feed Table Elevator Trip Return Lever | RF-308B | 8 | OGECK | Pump Valve Cage |
| RF-243P | Not Shown | OFULK | Pin | RF-308C | 8 | OGEDU | Pump Valve Cap |
| RF.2435S | Not Shown | OFULM | Feed Table Elevator Trip Return Lever | RF-308E | 8 | OGEFT | Pump Valve Spring |
| RF-24388 | Not Shown | OFULM | Set Screw | RF-310A | 8 | OGEGL | Pump Valve Flanged Washer |
| RF-245A | 7 | OFUMS | Feed Table Elevator Trip Bracket | RF-310S | 8 | OGEHD | Pump Valve Flanged Washer Screw |
| | Not Shown | | Feed Table Elevator Trip Bracket Pin | RF-310SW | * | OGEJE | Pump Valve Screw Washer |
| RF-245P RF-246 | 7 | OFUPE | Feed Table Elevator Trip | RF-311A | 8 | OGEKA | *Pump Crank Shaft Bearing Top |
| RF-246P | Not Shown | | Feed Table Elevator Trip Pin | RF-311S | 8 | OGELB | Pump Crank Shaft Bearing Top Scree |
| RF-246W | Not Shown | | Feed Table Elevator Trip Pin Washer | RF-312 | 8 | OGEMS | *Pump Crank Shaft Bearing Bottom |
| RF-248E | Not Shown | OFUTE | Delivery Table Side Jogger Plate Spring | RF-325 | 8 | OGENF | Pump Piston Rod |
| RF-248E RF-249A | 7 | OFUVE | Delivery Table Side Jogger Cam | RF-325N | 8 | OGEPY | Pump Piston Rod Lock Nut |
| RF-24988 | 1 | OFUWA | Delivery Table Side Jogger Cam Set | RF-329 | 8 | OGERF | Pump Gasket |
| Kr-14900 | | | Serve | RF-330 | 8 | OGESK | Pump Shaft |
| PF-250 | 1 | OFUXY | Delivery Table Side Jogger | RF-330SS | 8 | OGETY | Pump Shaft Set Screw |
| RF-250N | 7 | OFUVI | Delivery Table Side Jogger Nut | RF-330688 | 8 9 | OGEVO | Pump Shaft Set Screw Nut |
| RF-250N | 7 | OFUZA | Delivery Table Side Jogger Screw | RF-330T | 3 | OGEWP | Pump Shaft Oil Tube |
| | 7 | OFVAB | *Delivery Table Jogger Plate, Left | RF-330TC | 3 | OGEXT | Pump Shaft Oil Tube Clamp |
| | | | Delivery Table Jogger Plate Spring Pin | RF-333 | 8 | OGEYU | Pump Blast Hose |
| | 7 | | Delivery Table Jogger Plate Screw | RF-333C | 8 | OGEZI | Pump Blast Hose Clamp |
| RF-252EH | 7 7 | OFVEN | | | | | |
| RF-252EH RF-252S | | OFVIQ | Delivery Table Jogger Plate Gib | RF-334 | 8 | . OGFAP | Pump Blast Hose Nipple |
| RF-252EH RF-252S RF-253A | 7 | OFVIQ OFVOS | Delivery Table Jogger Plate Gib Delivery Table Jogger Plate Gib Screw | RF-334 RF-335 | 8 | OGFEW | Pump Vacuum Hose Nipple |
| RF-252EH RF-252S RF-253A RF-253S | 7 7 | OFVIQ OFVUR | Delivery Table Jogger Plate Gib Delivery Table Jogger Plate Gib Screw Delivery Table Side Jogger Cam Roll | RF-334 RF-335 RF-336 | 8 8 | OGFEW | Pump Vacuum Hose Nipple Throw-Off Hose Nipple |
| RF-252EH RF-252S RF-253A RF-253S RF-255A | 7 7 Not Shown Not Shown | OFVIQ OFVUR OFWAH | Delivery Table Jogger Plate Gib Delivery Table Jogger Plate Gib Screw Delivery Table Side Jogger Cam Roll Delivery Table Side Jogger Cam Roll Pin | RF-334 RF-335 RF-336 RF-337 | 8 | OGFEW OGFIV OGFOY | Pump Vacuum Hose Nipple Throw-Off Hose Nipple Feed Air Line "Y" Fitting |
| RF-252EH RF-252S RF-253A RF-253S RF-255A RF-256A | 7 7 Not Shown Not Shown Not Shown | OFVIQ OFVOS OFVUR OFWAH OFWEF | Delivery Table Jogger Plate Gib Delivery Table Jogger Plate Gib Screw Delivery Table Side Jogger Cam Roll Delivery Table Side Jogger Cam Roll Pin | RF-334 RF-335 RF-336 RF-337 RF-339A | 8 8 | OGFEW OGFOY OGFUM | Pump Vacuum Hose Nipple Throw-Off Hose Nipple Feed Air Line "Y" Fitting Feed Table Feeler Lift Lever Shaft |
| RF-252EH RF-252S RF-253A RF-253S RF-255A RF-256A | 7 7 Not Shown Not Shown | OFVIQ OFVOS OFVUR OFWAH OFWEF OFWIP | Delivery Table Jogger Plate Gib Delivery Table Jogger Plate Gib Screw Delivery Table Side Jogger Cam Roll Delivery Table Side Jogger Cam Roll Delivery Table Front Jogger Rod Bracket | RF-334 RF-335 RF-336 RF-337 RF-339A RF-340 | 8 8 | OGFEW OGFIV OGFOY OGFUM OGGAB | Pump Vacuum Hose Nipple Throw-Off Hose Nipple Feed Air Line "Y" Fitting Feed Table Feeler Lift Lever Shaft Feed Table Feeler Lift Lever |
| RF-252EH RF-252S RF-253A RF-253S RF-255A RF-256A RF-262 | 7 7 7 Not Shown Not Shown 7 | OFVIQ OFVOS OFVUR OFWAH OFWEF OFWIP | Delivery Table Jogger Plate Gib Delivery Table Jogger Plate Gib Screw Delivery Table Side Jogger Cam Roll Delivery Table Side Jogger Cam Roll Pin Delivery Table Front Jogger Rod Bracket Delivery Table Front Jogger Rod | RF-334 RF-335 RF-336 RF-337 RF-339A RF-340 RF-342 | 8 8 | OGFEW OGFOY OGFUM OGGAB OGGEC | Pump Vacuum Hose Nipple Throw-Off Hose Nipple Feed Air Line "Y" Fitting Feed Table Feeler Lift Lever Shaft Feed Table Feeler Lift Lever Pin Feed Table Feeler Lift Lever Pin |
| RF-252EH RF-252S RF-253A RF-253S RF-255A RF-256A RF-262 | 7 7 Not Shown Not Shown Not Shown | OFVIQ OFVOS OFVUR OFWAH OFWEF OFWIP | Delivery Table Jogger Plate Gib Delivery Table Jogger Plate Gib Screw Delivery Table Side Jogger Cam Roll Delivery Table Side Jogger Cam Roll Pin Delivery Table Front Jogger Rod Bracket Delivery Table Pront Jogger Rod Bracket Screw | RF-334 RF-335 RF-336 RF-337 RF-339A RF-340 RF-342 RF-343 | 8 8 2 7 7 7 | OGFEW OGFIV OGFOY OGFUM OGGAB OGGEC OGGID | Pamp Vacuum Hose Nipple Throx-Off Hose Nipple Feed Air Line "Y" Fitting Feed Table Feeler Lift Lever Shaft Feed Table Feeler Lift Lever Feed Table Feeler Lift Lever Pin Feed Table Feeler Lift Lever Pin Feed Table Feeler Lift Shaft Collar |
| RF-252EH RF-252S RF-253A RF-253S RF-255A RF-256A RF-262 RF-262 | 7 7 Not Shown Not Shown 7 Not Shown | OFVIQ OFVOS OFVUR OFWAH OFWEF OFWIP | Delivery Table Jogger Plate Gib Delivery Table Jogger Plate Gib Screw Delivery Table Side Jogger Cam Roll Delivery Table Side Jogger Cam Roll Pin Delivery Table Front Jogger Rod Bracket Delivery Table Pront Jogger Rod Bracket Screw | RF-334 RF-335 RF-335 RF-337 RF-339A RF-340 RF-342 RF-343 RF-343SS | 8 8 2 7 7 7 7 7 Not Shown | OGFEW OGFIV OGFOY OGFUM OGGAB OGGEC OGGID OGGOF | Pamp Vacuum Hose Nipple Throw-Off Hose Nipple Feed Air Line "Y" Fitting Feed Table Feeler Lift Lever Shaft Feed Table Feeler Lift Lever Pin Feed Table Feeler Lift Shaft Collar Feed Table Feeler Lift Shaft Collar Feed Table Feeler Lift Lever Set Scre |
| RF-252EH RF-2525 RF-253A RF-253S RF-255A RF-256A RF-262 RF-262 RF-2628 | 7 7 Not Shown Not Shown 7 Not Shown 7 | OFVIQ OFVOS OFVUR OFWAH OFWEF OFWOM OFWUK | Delivery Table Jogger Plate Gib Delivery Table Jogger Date Gib Screw Delivery Table Side Jogger Cam Roll Delivery Table Side Jogger Cam Roll Delivery Table Front Jogger Rod Bracket Screw Delivery Table Front Jogger | RF-334 RF-335 RF-336 RF-337 RF-339A RF-340 RF-342 RF-343 | 8 8 2 7 7 7 | OGFEW OGFIV OGFOY OGFUM OGGAB OGGEC OGGID | Pamp Vacuum Hose Nipple Throw-Off Hose Nipple Feed Air Line "Y" Fitting Feed Table Feeler Lift Lever Shaft Feed Table Feeler Lift Lever Fin Feed Table Feeler Lift Lever Fin Feed Table Feeler Lift Laver Set Sere Feed Table Feeler Lift Lever Set Sere Feed Table Feeler Lift Lever Set Sere Feed Table Feeler Camturt Weight |
| RF-252EH RF-2525 RF-253A RF-253S RF-255A RF-256A RF-262 RF-262 RF-2628 | 7 7 Not Shown Not Shown 7 Not Shown | OFVIQ OFVOS OFVUR OFWAH OFWEF OFWIP | Delivery Table Jogger Plate Gib Delivery Table Jogger Plate Gib Screw Delivery Table Side Jogger Cam Roll Delivery Table Side Jogger Cam Roll Delivery Table Side Jogger Cam Roll Benkert Delivery Table Front Jogger Rod Bracket Delivery Table Front Jogger Adjusting | RF-334 RF-335 RF-335 RF-337 RF-339A RF-340 RF-342 RF-343 RF-343SS | 8 8 2 7 7 7 7 7 Not Shown | OGFEW OGFIV OGFOY OGFUM OGGAB OGGEC OGGID OGGOF | Pamp Vacuum Hoos Nipple Throw-Off Hoos Nipple Feed Air Line "Y" Fitting Feed Table Feeler Lift Lever Shaft Feed Table Feeler Lift Lever Fin Feed Table Feeler Lift Lever Fin Feed Table Feeler Lift Lever Set Sere Feed Table Feeler Lift Camp |
| RF-252EH RF-252S RF-253A RF-253A RF-255A RF-256A RF-262 RF-262S RF-263A RF-263S | 7 7 7 Not Shown Not Shown 7 Not Shown 7 1 | OFVIQ OFVOS OFVUR OFWAH OFWEF OFWIP OFWOM OFWUK OFYAL | Delivery Table Jugger Plate Gib Delivery Table Jugger Plate Gib Screw Delivery Table Side Jogger Cam Roil Delivery Table Side Jogger Cam Roil Delivery Table Side Jogger Roil Delivery Table Front Jugger Rod Beakert Screw Delivery Table Front Jugger Rod Delivery Table Front Jugger Adjusting Screw Table Front Jugger Adjusting Screw Table Front Jugger Adjusting Screw Table Front Jugger Roil Delivery Table Front Jugger Roil Delive | RF-334 RF-335 RF-336 RF-337 RF-339A RF-342 RF-343 RF-343 RF-343S RF-344 | 8 8 2 7 7 7 7 Not Shown | OGFEW OGFIV OGFOY OGFUM OGGAB OGGEC OGGID OGGOF OGGUH OGHAL OGHEM | Pamp Vacuum Hoos Nipple Throw-Off Hoos Nipple Feed Air Line "Y" Fitting Feed Table Feeder Lift Lever Binaft Feed Table Feeder Lift Lever Pin Feed Table Feeder Lift Lever Feeder Feed Table Feeder Lift Lever Set Sere Feed Table Feeder Lift Lever Set Sere Feed Table Feeder Counter Weight Feed Table Feeder Counter Weight Feed Table Feeder Lift Cam Set Serev |
| RF-252EH RF-252S RF-253A RF-253A RF-253A RF-256A RF-256A RF-262 RF-262S RF-263S RF-263S | 7 Not Shown Not Shown Not Shown 7 Not Shown 7 1 | OFVIQ OFVOS OFVUR OFWAH OFWEF OFWIP OFWOM OFWUK OFYAL | Delivery Table Jugger Plate Gib Delivery Table Jugger Plate Gib Screw Delivery Table Side Jogger Cam Roil Delivery Table Side Jogger Cam Roil Delivery Table Side Jogger Roil Delivery Table Front Jugger Rod Beakert Screw Delivery Table Front Jugger Rod Delivery Table Front Jugger Adjusting Screw Table Front Jugger Adjusting Screw Table Front Jugger Adjusting Screw Table Front Jugger Roil Delivery Table Front Jugger Roil Delive | RF-334 RF-335 RF-336 RF-337 RF-349 RF-342 RF-343 RF-343SS RF-344 RF-345 | 8 8 2 7 7 7 7 Not Shown | OGFEW OGFIV OGFOY OGGAB OGGED OGGID OGGOF OGGUH OGHAL | Pauny Vacuum How Nipple Throw-Off Boo Nipple Feed Air Line "Y" Fitting Feed Table Feeler Lift Lever Feed Table Feeler Lift Lever Pin Feed Table Feeler Lift Lever Pin Feed Table Feeler Lift Lever Staff Feed Table Feeler Lift Lever Feed Table Feeler Lift Com Set Store Feed Table Feeler Lift Com Set Store |
| RF-252EH RF-252S RF-253A RF-253A RF-255A RF-256A RF-262 RF-262 RF-262S RF-263S RF-263S RF-265SS RF-266 | 7 Not Shown Not Shown Not Shown 7 Not Shown 7 1 1 7 | OFVIQ OFVOS OFVUR OFWAH OFWEF OFWIP OFWOM OFWUK OFYAL OFYEG OFYIN | Delivery Table Jugger Plate Gib Delivery Table Jugger Plate Gib Screw Delivery Table Jugger Plate Gib Screw Delivery Table Side Jugger Cam Roll Delivery Table Side Jugger Rod Bracket Delivery Table Front Jugger Rod Bracket Screw Delivery Table Front Jugger Delivery Table Front Jugger Rod Bracket Screw Delivery Table Front Jugger Adjusting Screw Delivery Table Front Jugger Rod Delivery Table Front Jugger Rod Delivery Table Front Jugger Rod | RF-334 RF-335 RF-336 RF-337 RF-339A RF-340 RF-342 RF-343 RF-345 RF-345 RF-345 RF-345 | 8 8 2 7 7 7 Not Shown 7 Not Shown | OGFEW OGFIV OGFOY OGFUM OGGAB OGGEC OGGID OGGOF OGGUH OGHAL OGHEM OGHIN | Pamp Vacuum Hoos Nipple Throw-Off Boos Nipple Feed Air Lion "Y" Fitting Feed Table Feele Lift Lever Shaft Feed Table Feele Lift Lever Fin Feed Table Feele Lift Lever Fin Feed Table Feele Lift Lever Fin Feed Table Feele Lift Lover Feed Table Feele Lift Lever Feel Feed Table Feele Lift Lover Set Ser Feed Table Feele Lift Low Ever Feed Table Feeler Lift Com Exer Feed Table Feeler Lift Com Exer Feed Table Feeler Lift Com Lever Feed Table Feeler Lift Com Lever Feed Table Feeler Lift Com Lever |
| RF-252AA RF-252EH RF-252S RF-253A RF-253A RF-255A RF-256A RF-262 RF-262S RF-265A RF-265S RF-265S RF-265S RF-2666 RF-266P | 7 Not Shown Not Shown Not Shown 7 Not Shown 7 1 1 7 Not Shown | OFVIQ OFVOS OFVUR OFWAH OFWEF OFWIP OFWOM OFYAL OFYEG OFYIN OFYOD | Delivery Table Jogger Plate Gib Delivery Table Jogger Plate Gib Berew Delivery Table Side Jogger Cam Roll Delivery Table Side Jogger Cam Roll Delivery Table Side Jogger Cam Roll Delivery Table Front Jogger Rod Delivery Table Front Jogger Rod Besidert Seree Delivery Table Front Jogger Adjusting Serow Delivery Table Front Jogger Adjusting Serow Delivery Table Front Jogger Roll Polivery Table Front Jogger Roll Delivery Table Front Jogger Roll Polivery Table Poliver Jogger Roll Delivery Table Polivery Table Poliv | RF-334 RF-335 RF-336 RF-339A RF-340 RF-342 RF-343 RF-345 RF-345 RF-345 RF-345 RF-347 RF-347 RF-347 | 8 8 2 7 7 7 7 7 Not Shown 7 Not Shown 7 | OGFEW OGFIV OGFOY OGFUM OGGAB OGGEC OGGID OGGOF OGGUH OGHEM OGHIN OGHOP | Pauny Vacuum How Nipple Throw-Off Boo Nipple Feed Air Line "Y" Fitting Feed Table Feeler Lift Lever Feed Table Feeler Lift Lever Pin Feed Table Feeler Lift Lever Pin Feed Table Feeler Lift Lever Staff Feed Table Feeler Lift Lever Feed Table Feeler Lift Com Set Store Feed Table Feeler Lift Com Set Store |
| RF-252EH RF-252S RF-253A RF-253A RF-255A RF-256A RF-262 RF-262S RF-262S RF-261S RF-261S RF-265SS RF-266 | 7 Not Shown Not Shown Not Shown 7 Not Shown 7 1 1 7 | OFVIQ OFVOS OFVUR OFWAH OFWEF OFWIP OFWOM OFYAL OFYEG OFYIN OFYOD OFYUJ | Delivery Table Jugger Plate Gib Delivery Table Jugger Plate Gib Screw Delivery Table Jugger Plate Gib Screw Delivery Table Side Jugger Cam Roll Delivery Table Side Jugger Rod Bracket Delivery Table Front Jugger Rod Bracket Screw Delivery Table Front Jugger Delivery Table Front Jugger Rod Bracket Screw Delivery Table Front Jugger Adjusting Screw Delivery Table Front Jugger Rod Delivery Table Front Jugger Rod Delivery Table Front Jugger Rod | RF-334 RF-335 RF-336 RF-336 RF-349 RF-340 RF-342 RF-343 RF-343 RF-345 RF-345 RF-345 RF-345 RF-345 RF-345 | 8 8 2 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 | OGFEW OGFIV OGFOY OGFUM OGGAB OGGID OGGOF OGGUH OGHAL OGHEM OGHIN OGHOP | Pamp Vacuum Hoos Nipple Throw-Off Boos Nipple Feed Air Lion "Y" Fitting Feed Table Feele Lift Lever Shaft Feed Table Feele Lift Lever Fin Feed Table Feele Lift Lever Fin Feed Table Feele Lift Lever Fin Feed Table Feele Lift Lover Feed Table Feele Lift Lever Feel Feed Table Feele Lift Lover Set Ser Feed Table Feele Lift Low Ever Feed Table Feeler Lift Com Exer Feed Table Feeler Lift Com Exer Feed Table Feeler Lift Com Lever Feed Table Feeler Lift Com Lever Feed Table Feeler Lift Com Lever |

*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts.

IMPORTANT—Be sure to mention size of press for which parts are being ordered.

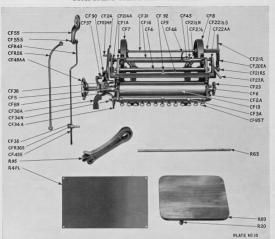

| Part Number | on Plate No. | Code | Name and Description | Part Number | on Piate No. | Code | Name and Description |
|----------------|-----------------|-------|--|----------------|-----------------|-------|--|
| RF-350A | 2 | ogico | Feed Cam Shaft Brace Connection | RF-378 | 9 | OGJEX | Feed Bar Rubber Sucker Tip Head |
| RF-350SS | Not Shown | OGIDE | Feed Cam Shaft Brace Connection Set | RF-381 | 9 | OGJIY | Feed Bar Metal Sucker Tip (Long) |
| | | | Screw | RF-382 | 9 | OGJOZ | Feed Bar Metal Sucker Tip (Short) |
| RF-351A | 2 | OGIFA | Feed Cam Shaft Brace | RF-383 | 9 | OGJUR | Feed Bar Rubber Sucker Tip Holder |
| RF-351S | 2 | OGIGS | Feed Cam Shaft Brace Screw | | | | (Long) |
| RF-353 | 8 | OGIHK | Delivery Vacuum Pipe Connection Support | RF-384 | 9 | OGKAS | Feed Bar Rubber Sucker Tip Holder (Short) |
| RF-360 | 7 | OGIKU | Feed Table Worm Gear | RF-386 | 9 | OGKET | Feed Bar Cross Head Plug |
| RF-361 | Not Shown | OGILF | Feed Table Fixed Release Ratchet | RF-389 | 9 | OGKIV | Feed Bar Small Rubber Tip |
| RF-362 | Not Shown | OGIME | Feed Table Worm Gear Sleeve | RF-390 | 9 | OGKOP | Feed Bar Dummy Sucker |
| RF-363A | 7 | OGING | Feed Table Sliding Release Ratchet | RF-391 | 9 | OGKUQ | Rubber Sucker Tip Emery Face (Small) |
| RF-364 | Not Shown | OGIPS | Feed Table Sliding Release Ratchet Key | RF-392 | 9 | OGLAN | Rubber Sucker Tip Emery Face (Large) |
| RF-365 | Not Shown | OGIRB | Feed Table Sliding Release Ratchet | RF-396 | 9 | OGLEM | Delivery Bar Sucker Tip Head |
| | | | Spring | RF-399 | 9 | OGLIL | Feed Table Setting Gauge |
| RF-366 | 2 | OGISM | Feed Table Sliding Release Ratchet | RF-407A | 9 | OGLOK | *Register Gauge Finger (4 1/4" long) |
| | | | Spring Collar | RF-407E | 9 | OGLUJ | Register Gauge Finger Spring |
| RF-366S | Not Shown | OGITA | Feed Table Sliding Release Ratchet | RF-407N | . 9 | OGMAH | Register Gauge Finger Spring Nut |
| | | | Spring Set Screw | RF-407\$ | Not Shown | OGMEG | Register Gauge Finger Spring Stud |
| RF-367 | 8 | OGIVU | *Feed Air Line Pipe Street Ell | RF-4073-5A | 9 | OGMIF | *Register Gauge Finger (5 1/4" long) |
| RF-369 | 8 | OGIWA | *Feed Air Line Pipe Tee | RF-408A | 9 | OGMOD | *Register Gauge Finger (2 11 long) |
| RF-370 | 9 | OGIXL | *Feed Bar Clamp Tube | RF-40836A | 9 | | |
| RF-372 | 9 | OGIYA | *Feed Bar Sliding Tube | RF-409A | 9 | | *Register Gauge Finger (3 1/4" long) |
| RF-375 | 9 | OGIZO | Feed Bar Sucker Tip Holder Clamp Screw | RF-410 | 6 | | *Register Operating Spool |
| RF-376 | 9 | OGJAW | Feed Bar Cross Head | RF-410N | 6 | OGNIV | Register Operating Spool Adjusting Nut |

Part Shown

*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts.

IMPORTANT—Be sure to mention size of press for which parts are being ordered.

Part Shown

| | Part Shown | | | | Part Shown | | |
|---------------------|-----------------|-------|--|--------------------|------------------------|-------|---|
| Part Number | on Plate No. | Code | Name and Description | Part Number | Plate No. | Code | Name and Description |
| RF-411 | Not Shown | OGNOT | Register Operating Spool Stud | RF-482A | 8 | OGUYT | *Two-Up Feed Table Auxiliary Short |
| RF-415A | Not snown | OGNUS | *Register Operating Spool Cam | Nr-Tean | | 00011 | Back Stop (Special) |
| RE-415P | 6 | OGOBA | Register Operating Spool Cam Pin | RF-483A | 8 | OGUZL | Two-Up Feed Table Auxiliary Short |
| RF-416AA | 6 | OGOCH | Register Operating Spool Cam Stud | | | | Back Stop Shaft (Special) |
| RF-416N | Not Shown | OGODY | Register Operating Spool Adjusting Lock Nut | RF-484 | 8 | OGVAL | Two-Up Feed Table Auxiliary Short Back Stop Bracket (Special) |
| RF-418A | 6 | OGOFE | Register Operating Connecting Link Spring | RF-485 | Not Shown | OGVED | Two-Up Feed Table Auxiliary Feeler (Special) |
| RF-419 | 6 | OGOGI | Register Operating Connecting Link | RF-486 | 9 | OGVIP | *Freed Bar Double Rubber Sucker Tip, |
| RF-421A | 6 | OGOHC | Register Operating Arm Pin | | | | L. H. (Special) |
| RF-422 | 6 | OGOKS | *Register Operating Arm | RF-487 | 9 | OGVOF | *Feed Bar Double Rubber Sucker Tip, |
| RF-422SS | Not Shown | OGOLK | Register Operating Arm Set Screw Register Bracket Guide Shaft | RF-490 | 8 | ogyuc | R. H. (Sprcial) Two-Up Feed Table Auxiliary Long |
| RF-425 RF-428A | 9 | OGONE | Register Bracket Operating Shaft | R.F -490 | | odvoc | Back Stop Finger Shaft (Special) |
| RF-428CP | Not Shown | OGOPU | Register Bracket Operating Shaft Cotter | RF-491 | 8 | OGWAN | Two-Up Feed Table Auxiliary Short |
| RF-428W | Not Shown | OGORT | Register Bracket Operating Shaft Washer | | | | Back Stop Adjustable Shaft (Special |
| RF-429 | Not Shown | OGOSL | Register Bracket Operating Shaft Collar | RF-491S | Not Shown | OGWET | Two-Up Feed Table Auxiliary Short |
| RF-429SS | Not Shown | OGOTZ | Register Bracket Operating Shaft Collar Set Screw | | | | Back Stop Adjustable Shaft Screw (Special) |
| RF-432A | 9 | OGOVT | *Register Bracket Operating Shaft Bevel Gear | RF-492 | 8 | | *Two-Up Short Back Stop Shaft Brack (Special) |
| RF-432K | Not Shown | ogowj | Register Bracket Operating Shaft Bevel | RF-500 | 6 | OGWOH | Hold Down Operating Lever |
| | | | Gear Key | RF-500SS | Not Shown | OGWUZ | Hold Down Operating Lever Set Screw |
| RF-436A | 9 | OGOXE | Register Bracket Lock Screw | RF-502 | 4 | OGYAK | Hold Down Bracket, Left |
| RF-436E | Not Shown | OGOYB | Register Bracket Lock Screw Spring | RF-503 | 4 | OGYES | Hold Down Bracket, Right |
| RF-437AA | Not Shown | OGOZA | Register Bracket Post *Register Bracket Post Set Screw | RF-503S RF-505 | 4 | OGYIX | Hold Down Bracket Screw Hold Down Wire Bracket |
| RF-43788 | Not Shown | OGPAR | | RF-505E | 4 | OGYUM | Hold Down Wire Bracket Hold Down Wire |
| RF-438A | 9 | OGPES | *Register Bracket Post Bevel Gear Register Bracket | RF-505B RF-505S | 4 | OGZAP | Hold Down Wire Bracket Clamp Scree |
| RF-439AA RF-440A | 9 | OGPOV | *Register Bracket Finger Holder | PE-505 | | OGZEN | Hold Down Wire Bracket Washer |
| PF-440N | Not Shown | OGPUZ | Register Bracket Finger Screw Nut | RF-506S | Not Shown | OGZIF | Hold Down Wire Bracket Washer Scr. |
| RF-440S | Not Shown | | Register Bracket Finger Screw | RF-507 | 4 | OGZOR | Hold Down Shaft |
| RF-443A | 9 | OGREY | *Register Finger (6 % long) | RF-507W | Not Shown | OGZUL | Hold Down Shaft Washer |
| RF-444 | Not Shown | OGRIW | Electric Heater Cross Bar (Special) | RF-508 | - 4 | OHABS | Hold Down Spring |
| RF-445A | 9 | OGROK | Electric Heater Bracket (Special) | RF-660 | 9 | OHACL | *Delivery Head for Folders (Special) |
| RF-446A | 9 | OGRUJ | Riectric Heater Post (Special) | RF-661 | 9 | OHADI | Delivery Head Pick-Up Finger Plunger |
| RF-447 | 8 | OGSAH | Electric Heater Clamp Screw | | | | (Special) |
| RF-450 | 9 | OGSEG | Delivery Bar Double Rubber Sucker T:p Holder | RF-662 RF-800 | 9 | | Delivery Head Pick-Up Finger (Special *Electric Heater (Special) |
| RF-451 | 9 | OGSIF | Delivery Bar Double Metal Sucker Tip | RF-801 | . 9 | OHAJE | Electric Heater Cord (Special) |
| RF-452 | 9 | OGSOD | *Delivery Bar Double Metal Sucker Tip | RF-810 | 1 | OHALF | Impression Counter Bed Extension Track, Left |
| | | ogsuc | R. H. (Long) Fred Bar Double Rubber Sucker Tip | RT3 RT3S | Not Shown | OHAMP | Bed Extension Track Screw |
| RF-453 | 9 | odsuc | Holder, L. H. | R135 | Not Shown | OHANT | Bed Extension Track, Right |
| PR-454 | 9 | OGTAB | Feed Bar Double Rubber Sucker Tip | RT5 | 3 | OHAPS | Bed Extension Track Pin |
| Kriss | | | Holder, R. H. | RT6 | 3 | OHAOU | Bed Extension Track Adjusting Screw |
| RF-455 | 9 | OGTEM | Feed Bar Double Metal Sucker Tip, L. H. | RT6N | Not Shown | OHARD | Bed Extension Track Adjusting Screw |
| RF-456 | 9 | OGTIN | Feed Bar Double Metal Sucker Tip, R. H. | | | | Nut |
| RF-457 | 9 | OGTOP | Feed Bar Double Metal Sucker Tip, L. H. (Long) | RT6W | Not Shown | | Bed Extension Track Adjusting Screw Washer |
| RF-458 | 9 | OGTUQ | Feed Bar Double Metal Sucker Tip, R. H. | RX99 | Not Shown | OHATY | Fountain Roll Shaft |
| | | | (Long) | TR27 | 1 | OHAVL | "Trip Truck Sliding Sleeve |
| RF-459 | 9 | OGUBA | | TR27E | | | Trip Truck Spring |
| | | | L. H. | TR27P | Not Shown | | Trip Truck Pin Trip Truck Roller |
| RF-460 | 9 | OGUCE | Feed Bar Double Rubber Sucker Tip, R. H. | TR2736 XD1C | Not Shown | | Vibrator Box Stud Cotter |
| RF-461 | 9 | OGUDI | K. H. | XDIE | Not Shown | OHBAM | Vibrator Box Stud Spring |
| RF-462 | 9 | OGUFO | A" Headless Set Screw Wrench | XDIN | Not Shown | | Vibrator Box Stud Nut |
| RF-463 | 9 | OGUGL | 16" Headless Set Screw Wrench | XDIP | Not Shown | | Vibrator Box Stud Pin |
| RF-464 | 9 | OGUES | 1/2 Square Head Set Screw Wrench | XDIW | Not Shown | OHBOQ | Vibrator Box Stud Washer |
| RF-465 | 9 | OGUJM | 1/4"-1/4" Open End Wrench | XD2E | Not Showh | OHBUZ | Vibrator Box Flat Spring (Long) |
| RF-466 | 9 | OGUKA | 1/2"- A" Open End Wrench | XD1ES | Not Shown | | Vibrator Box Flat Spring Screw |
| RF-467 | 9 | OGULP | Screw Driver | XD23/2E | Not Shown | OHCEH | Vibrator Box Flat Spring (Short) |
| RF-468 | 9 | OGUMY | Oil Can | XD4A | 1 | OHCIP | Vibrator Roil |
| RF-475 | 8 | OGUND | | XDSAA XDSD | Not Shown | OHCOG | Vibrator Red Ston Pin |
| RF-476 | 8 | OGUPL | Holder, R. H. (Special) *Two-Up Feed Table Center Finger, | XD6D | Not Shown | OHDAR | Vibrator Roll Bushing Stop Pin |
| RF-477 | 8 | OGURN | | XD8A XD8D | Not Shown Not Shown | OHDIK | Vibrator Rod Worm Stop Pin |
| RF-479A | | OGUSH | Holder, L. H. (Special) Two-Up Feed Table Back Stop Bracket | XD9 XD10N | Not Shown | OHDUT | |
| RF-4798 | | OGUTS | (Special) Two-Up Feed Table Back Stop Bracket | XD10S XD10]4S | Not Shown Not Shown | OHEES | Vibrator Box Latch Screw Vibrator Box Wing Nut Screw |
| 1170 | | | Screw (Special) | XD11A | Not Shown | OHEDL | Vibrator Ratchet Collar |
| RF-480A | 8 | OGUVE | "Two-Up Feed Table Long Back Stop | XD11P | Not Shown | | Vibrator Ratchet Collar Pin |
| RF-481 | 8 | oguwi | Finger (Special) Two-Up Feed Table Long Back Stop | XDX1A XDX1S | 1 | OHEGR | Vibrator Box, Left Vibrator Box Stud |
| | | | Finger Bracket (Special) | XDXIS XDX2 | 1 | | Vibrator Box, Right |
| RF-481S | Not Shown | OGUXA | Two-Up Feed Table Long Back Stop Finger Bracket Screw (Special) | XDX10A | 1 | | Vibrator Box, Right Vibrator Box Latch |
| | | | | | | | |

*Parts marked with an asterisk indicate special fitting and will be shipped with their mating part or parts.

IMPORTANT—Be sure to mention size of press for which parts are being ordered.



